


17. Key Lock Cylinders


A: REPLACEMENT

1. FRONT DOOR

- 1) Raise the front door glass to the top position.
- 2) Remove the front door trim. <Ref. to EI-41, REMOVAL, Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-22, REMOVAL, Front Sealing Cover.>
- 4) Remove the rod clamp.
- 5) Remove the plug to the rear of the door panel.
- 6) Remove the TORX® bolt (1).

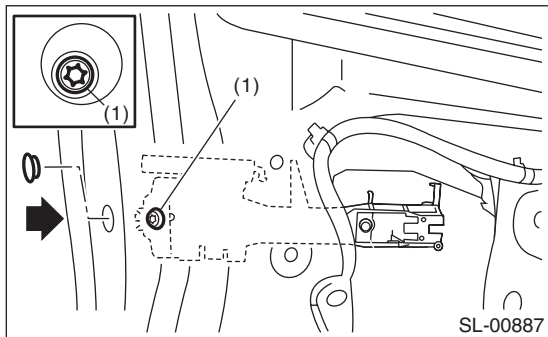


- 7) Remove the key cylinder along with the handle cover.
- 8) Remove the key cylinder from the cover, and replace the key cylinder.

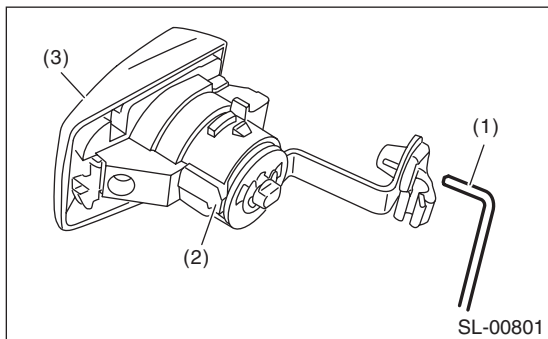


- (1) Latch connection rod
- (2) Key cylinder
- (3) Door outer handle cover

2. GLOVE BOX LID


- 1) Remove the glove box damper.

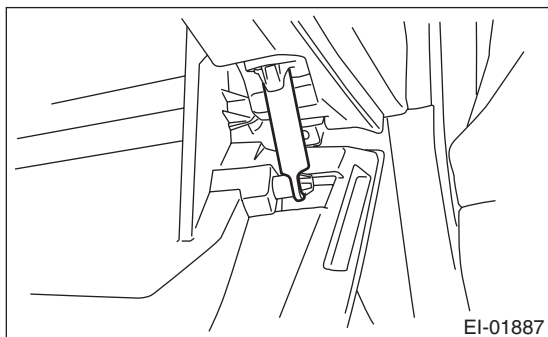


- 2) Remove the stoppers and pull the glove box lid assembly forward to remove.

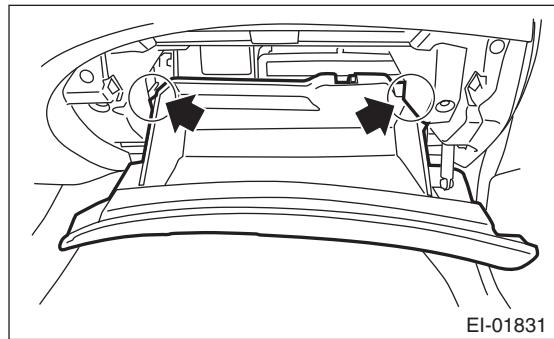

- 3) Pull up the lock knob with the key cylinder in UNLOCK.

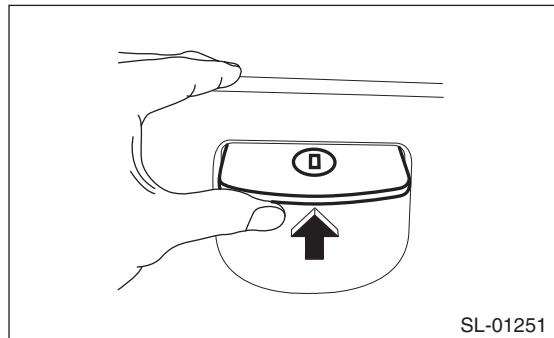

- 4) Insert the key while holding the condition of step 3), and pull out the key in LOCK status.

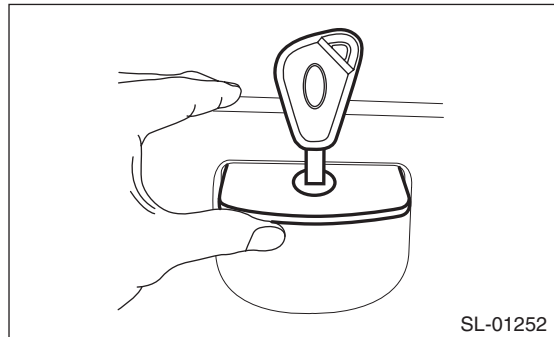

- 5) Remove the key cylinder from lock knob while pushing in the metal plate, and replace the key cylinder.

