


## 20. Keyless Entry Control Module

### A: REMOVAL


#### 1. 5 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the left rear quarter trim. <Ref. to EI-56, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the keyless entry control module connector.
- 4) Remove the bolt and then remove the keyless entry control module.

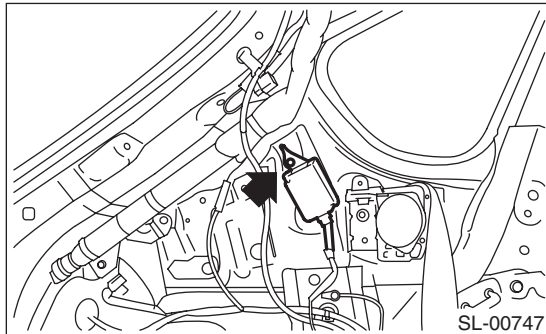

#### 2. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear shelf trim. <Ref. to EI-58, REMOVAL, Rear Shelf Trim.>
- 3) Disconnect the harness connector.
- 4) Remove the bolt and then remove the keyless entry control module.

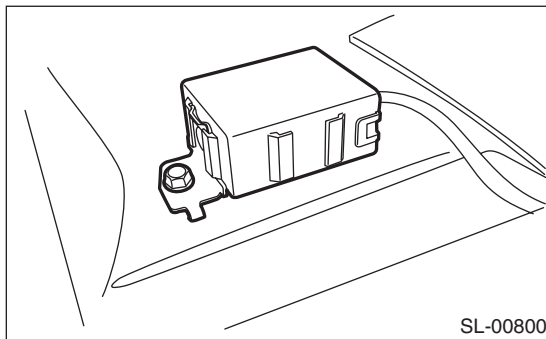

### B: INSTALLATION

Install each part in the reverse order of removal.

#### ***Tightening torque:***

***Keyless entry control module: 13 N·m (1.33 kgf-m, 9.6 ft-lb)***