


21. Keyless Buzzer

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Turn over the left front mud guard.
- 3) Remove the bolt, and then remove the keyless buzzer.

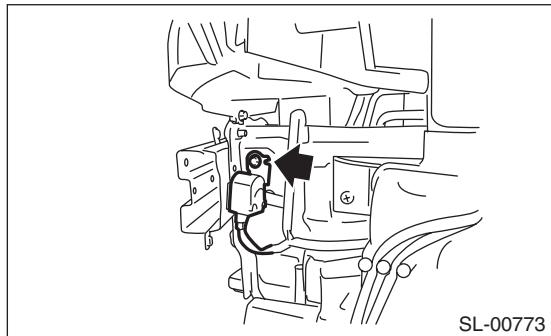

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Keyless buzzer: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

C: INSPECTION

Using the Subaru Select Monitor, perform forced operation of the keyless buzzer. <Ref. to LAN(diag)-15, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>

NOTE:

If it does not sound, replace the buzzer.