



## 25. Immobilizer Antenna

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screws and remove the steering column cover lower.

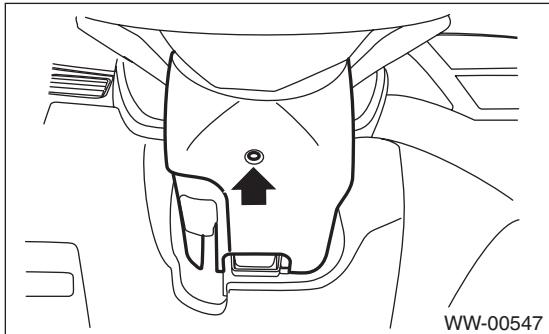


- 3) Remove the screws and remove the steering column cover upper.

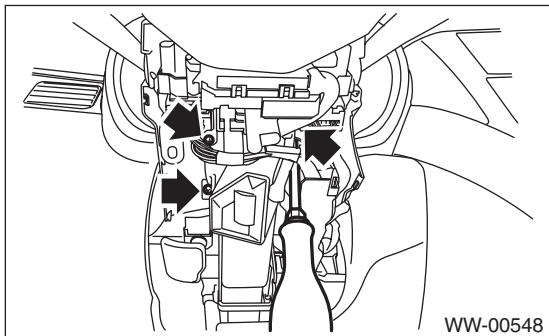

- 4) Remove the instrument panel lower cover. <Ref. to EI-44, REMOVAL, Instrument Panel Lower Cover.>
- 5) Disconnect the immobilizer antenna connector (A) and ignition switch lighting connector (B).
- 6) Loosen the screw and release the lock (D) at opposite side using flat tip screwdriver (1), and then detach the immobilizer antenna (C).

### CAUTION:

Do not apply excessive force to remove the immobilizer antenna and lock. Otherwise they may be broken because those parts are the products made of a plastic.

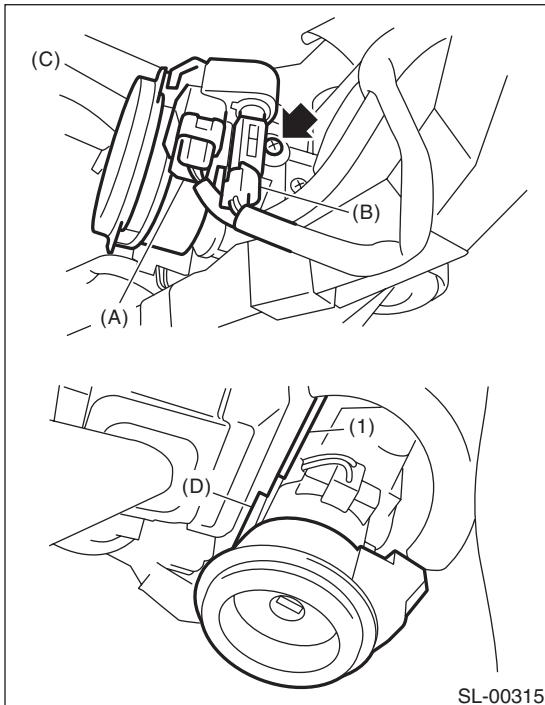

### B: INSTALLATION

Install each part in the reverse order of removal.

## **Immobilizer Antenna**

**SECURITY AND LOCKS**

---

# **SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)**

**SR**

---

	<b>Page</b>
1. General Description .....	2
2. Sunroof Control System .....	4
3. Glass Lid .....	5
4. Sunroof Assembly .....	6
5. Sunroof Motor .....	7
6. Sunroof Switch .....	8
7. Sunshade .....	9