


5. Front Inner Remote

A: REMOVAL

- 1) Remove the front door trim. <Ref. to EI-41, RE-MOVAL, Door Trim.>
- 2) Remove the cable from the cable holder.
- 3) Remove the screws, and remove the inner remote handle.

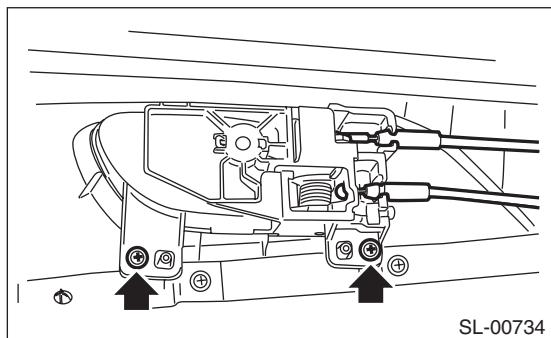

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Check if the front remote handle operates normally.

- If the lever is faulty, replace the front inner remote handle.
- If the cable is deformed, replace the front door latch&door lock actuator assembly.