


3. Glass Lid

A: REMOVAL

- 1) Completely close the glass lid, and open the sunshade.
- 2) Remove the TORX® bolt, and then remove the glass lid carefully.

CAUTION:

- The thread locker is applied to the TORX® bolts, so use the new parts once they are removed.
- Be careful not to damage the glass lid.

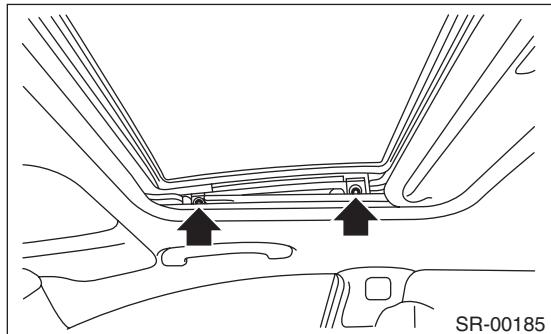

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SR-2, COMPONENT, General Description.>


C: ADJUSTMENT

Adjust the height of the glass lid and roof panel.

- Loosen the glass lid mounting TORX® bolts (A), and then adjust the height with moving the lid side.

Difference in height between glass lid and roof panel L:

0.75 mm (0.03 in)

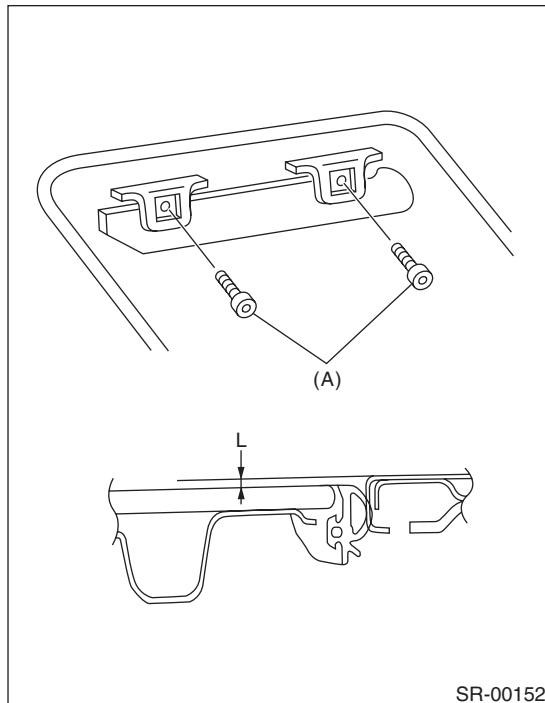

D: FORCED DRIVE

If the glass lid does not operate or is not supplied with power, move the glass lid using the hexagon wrench.

CAUTION:

After a forced operation, make sure to perform an initialize operation. <Ref. to SR-4, INSPECTION, Sunroof Control System.>

- 1) Remove the spot map light. <Ref. to LI-30, REMOVAL, Spot Map Light.>
- 2) Insert the hexagon wrench securely until it touches the motor shaft end.
- 3) Turn the hexagon wrench, and move the glass lid.
 - Turning right, the glass lid open.
 - Turning left, the glass lid close.

CAUTION:

Be careful not to damage the adjacent parts with the rod end when moving the glass lid with the hexagon wrench.

