

# Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


## 4. Sunroof Assembly

### A: REMOVAL


#### CAUTION:

When removing the clip, use great care not to damage the roof trim.

- 1) Disconnect the ground cable from battery.
- 2) Remove the roof trim. *<Ref. to EI-62, REMOVAL, Roof Trim. >*
- 3) Disconnect the sunroof motor connector.
- 4) Remove the glass lid. *<Ref. to SR-5, REMOVAL, Glass Lid. >*
- 5) Remove the four drain tubes from frame assembly.
- 6) Remove the bolts, and remove the assist rail bracket (front) (A) and assist rail bracket (rear) (B).

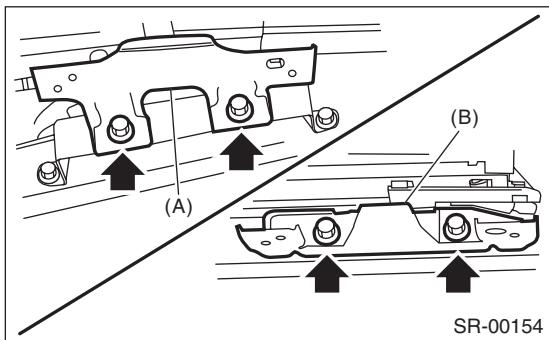

- 7) Remove the curtain airbag module. (model with curtain airbag module) *<Ref. to AB-20, REMOVAL, Curtain Airbag Module. >*
- 8) Remove the bolts and nuts to remove the frame assembly.

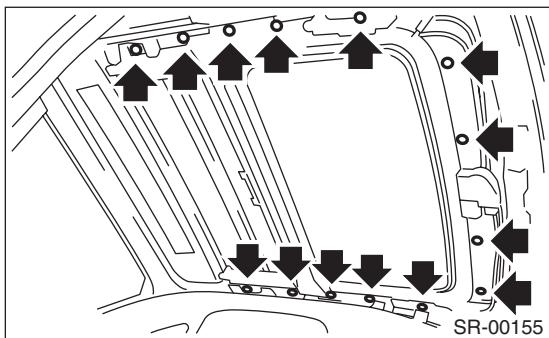

### B: INSTALLATION

#### CAUTION:

Be careful not to snag the harness.

Install each part in the reverse order of removal.

#### Tightening torque:

Refer to "COMPONENT" of "General Description". *<Ref. to SR-2, COMPONENT, General Description. >*


#### NOTE:

- Be sure to connect the harness connector.

- When installing the drain tube, insert it securely into drain pipe.

#### Length A:

15 mm (0.59 in) or more

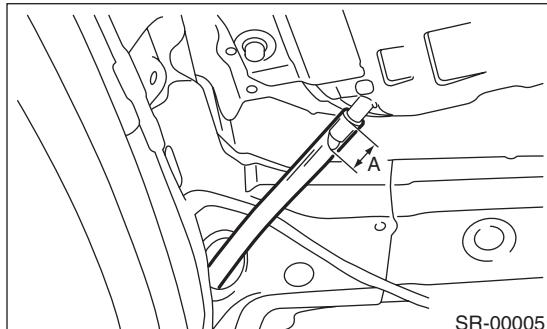

### C: DISASSEMBLY

- 1) Remove the sunroof motor. *<Ref. to SR-7, REMOVAL, Sunroof Motor. >*
- 2) Remove the sunshade. *<Ref. to SR-9, REMOVAL, Sunshade. >*

### D: ASSEMBLY

Assemble each part in the reverse order of disassembly.