


7. Sunshade

A: REMOVAL


- 1) Remove the sunroof assembly. <Ref. to SR-6, REMOVAL, Sunroof Assembly.>
- 2) Remove the screws, and remove the drip rail.

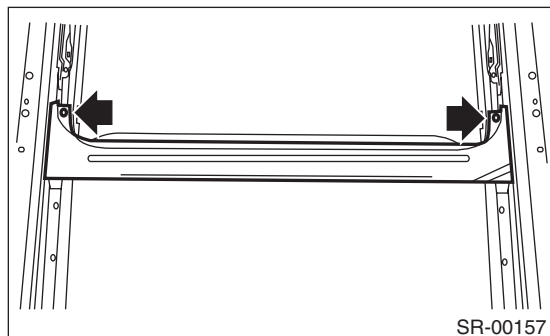

- 3) Remove the sunshade.

CAUTION:

Being careful not to damage the shade knob, pull out it while bending the sunshade.

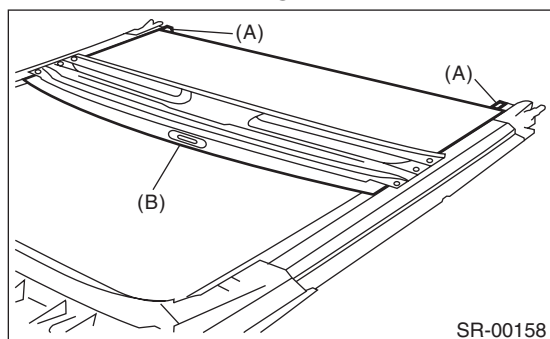

- (1) Remove the shade stopper (A).
- (2) Pull out the sunshade (B) from the frame assembly.


B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

- 1) Attach a spring scale to sunshade edge using a cloth.

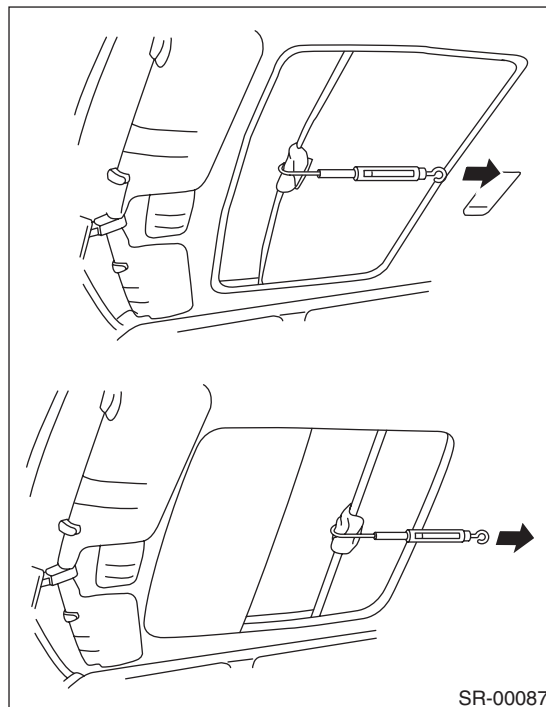

- 2) Pull the spring scale to check the moving load of the sunshade.

Moving load of sunshade:

Specification

$18.0 \pm 5.0 \text{ N}$ ($1.8 \pm 0.5 \text{ kgf}$, $13 \pm 3.7 \text{ lbf}$)

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while sunshade sliding smoothly.

- 3) If the inspection result exceeds the standard value, check if sunshade or frame assembly are not deformed, and replace if faulty.

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Grille	23
3. Front Under Cover	24
4. Fuel Tank Protector	25
5. Mud Guard	26
6. Front Bumper	27
7. Rear Bumper	34
8. Cowl Panel	36
9. Roof Spoiler	37
10. Rear Spoiler	38
11. Side Sill Spoiler	39
12. Roof Molding	40
13. Door Trim	41
14. Instrument Panel Lower Cover	44
15. Glove Box	45
16. Console Box	46
17. Center Console	47
18. Instrument Panel Assembly	50
19. Lower Inner Trim	53
20. Upper Inner Trim	55
21. Rear Quarter Trim	56
22. Rear Shelf Trim	58
23. Trunk Room Trim	59
24. Sun Visor	60
25. Assist Grip	61
26. Roof Trim	62
27. Rear Gate Trim	65
28. Floor Mat	67
29. Rear Gate Garnish	68
30. Trunk Lid Garnish	69
31. Heat Shield Cover	70
32. Ornament	71