

Wiper and Washer System

WIPER AND WASHER SYSTEMS

2. Wiper and Washer System

A: WIRING DIAGRAM

1. WIPER AND WASHER (FRONT)

Refer to "Front Wiper and Washer System" in the wiring diagram. <Ref. to WI-98, WIRING DIAGRAM, Front Wiper and Washer System.>

2. WIPER AND WASHER (REAR)

Refer to "Rear Wiper and Washer System" in the wiring diagram. <Ref. to WI-99, WIRING DIAGRAM, Rear Wiper and Washer System.>

B: INSPECTION

| Symptom | Repair order |
|---|---|
| Wiper and washers do not operate. | 1. Wiper fuse (F/B No. 14, 15) 2. Combination switch 3. Wiper motor assembly 4. Wiring harness |
| Wipers do not operate in LO or HI. | 1. Combination switch 2. Wiper motor assembly 3. Wiring harness |
| Wipers do not operate in INT. | 1. Combination switch 2. Wiper motor assembly 3. Wiring harness |
| Washer motor does not operate. | 1. Washer switch 2. Washer motor 3. Wiring harness |
| Wipers do not operate when washer switch is ON. | 1. Wiper motor assembly 2. Wiring harness |
| Washer fluid spray does not operate properly. | 1. Washer motor 2. Washer hose and nozzle |

C: NOTE

For procedure of each component of the wiper and washer system, refer to the respective sections.

- Combination switch (Wiper): <Ref. to WW-7, Combination Switch (Wiper).>
- Wiper blade: <Ref. to WW-11, Wiper Blade.>
- Front wiper arm: <Ref. to WW-14, Front Wiper Arm.>
- Front wiper motor and link: <Ref. to WW-15, Front Wiper Motor and Link.>
- Rear wiper arm: <Ref. to WW-18, Rear Wiper Arm.>
- Rear wiper motor: <Ref. to WW-19, Rear Wiper Motor.>
- Washer tank and motor: <Ref. to WW-13, Washer Tank and Motor.>
- Front washer nozzle: <Ref. to WW-17, Front Washer Nozzle.>
- Rear washer nozzle: <Ref. to WW-20, Rear Washer.>