


# Front Wiper Arm

## WIPER AND WASHER SYSTEMS

### 6. Front Wiper Arm


#### A: REMOVAL

- 1) Open the front hood.
- 2) Remove the cap.
- 3) Remove the nut and remove the arm.

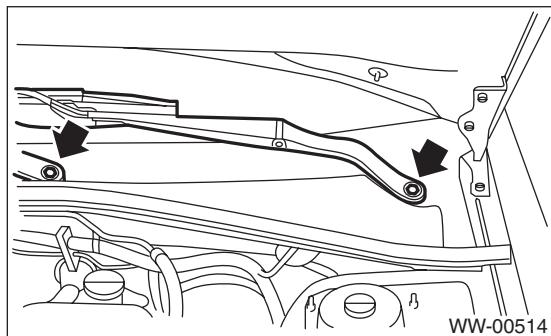

#### B: INSTALLATION

- 1) Install each part in the reverse order of removal.
- 2) Operate the wiper once.
- 3) Align the wiper blade to ceramic print point mark (A) of front window panel.

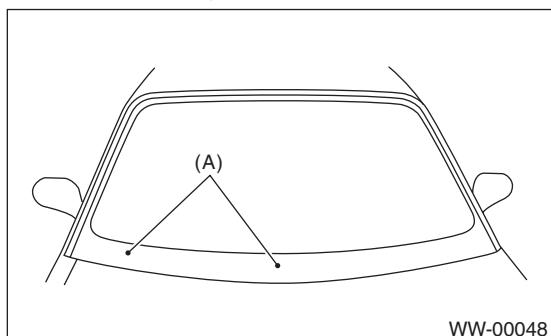

#### Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to WW-2, FRONT WIPER, COMPONENT, General Description.>

#### C: ADJUSTMENT

Operate the wiper once. Align the wiper blade to ceramic print point mark (A) of front window panel.

