



### 9. Rear Wiper Arm

#### A: REMOVAL

- 1) Detach the wiper arm cover (A).

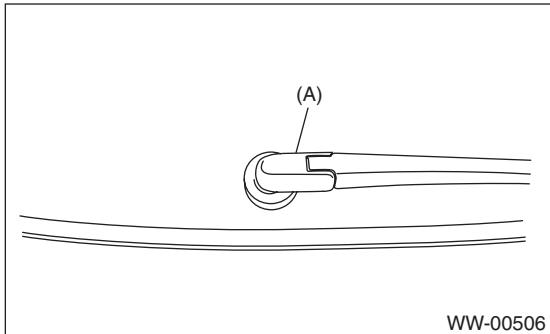


- 2) Remove the nut and remove the wiper arm.

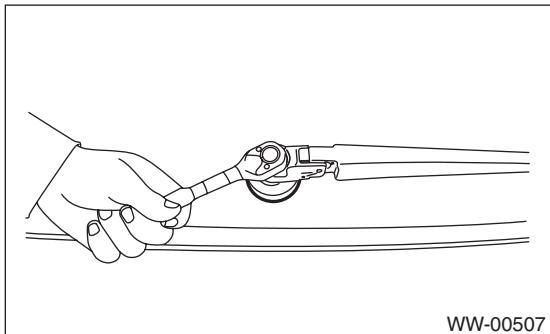

#### B: INSTALLATION

- 1) Install each part in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade with the marking (A) of the glass.

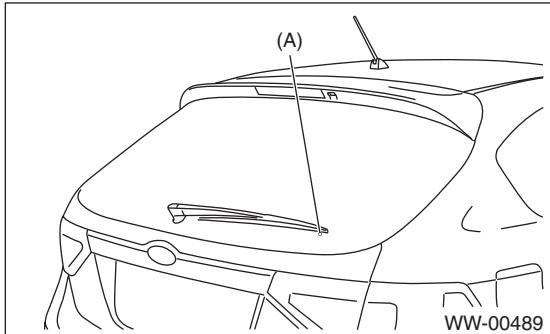

#### ***Tightening torque:***

Refer to "COMPONENT" of "General Description". <Ref. to WW-3, REAR WIPER, COMPONENT, General Description. >

#### C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade with the marking (A) of the glass.

