



### 3. Rear Stabilizer

#### A: REMOVAL

- 1) Lift up the vehicle, and then remove the rear wheels.
- 2) Remove the stabilizer link.

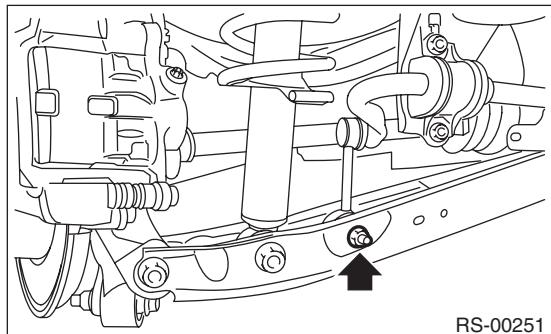


- 3) Remove the stabilizer clamp.

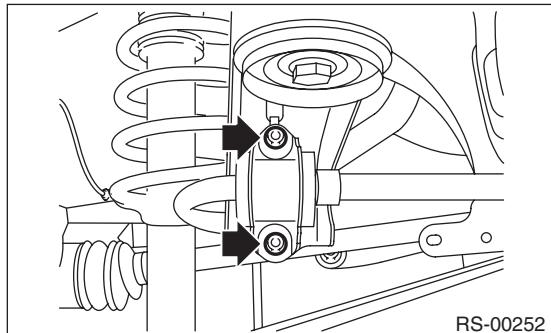

#### B: INSTALLATION

##### CAUTION:

- Be sure to use a new flange nut and self-locking nut.
- Always tighten the bushing in the state where the vehicle is at curb weight and the wheels are in full contact with the ground.
- Align the paint mark end of stabilizer to the end of bushing when installing.

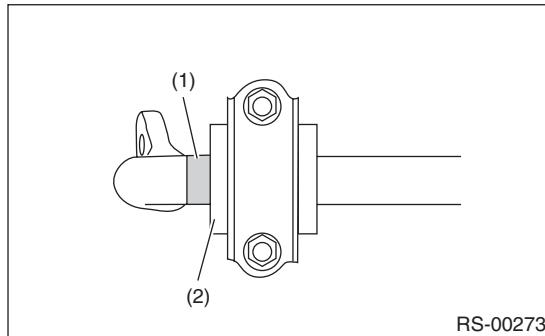

(1) Identification paint  
(2) Bushing

Install each part in the reverse order of removal.

##### *Tightening torque:*

###### *Stabilizer link*

*38 N·m (3.9 kgf·m, 28 ft-lb)*

###### *Stabilizer clamp*

*40 N·m (4.1 kgf·m, 29.5 ft-lb)*

#### C: INSPECTION

- 1) Check the bushing for abnormal cracks, fatigue or damage.
- 2) Check the stabilizer link for damage.