

List of Diagnostic Trouble Code (DTC)

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

10. List of Diagnostic Trouble Code (DTC)

A: LIST

| DTC | Item | Contents of diagnosis | Remarks |
|-----|--------------------------------------|---|---|
| 11 | Tire 1 Air Pressure Decrease | Tire pressure of tire 1 is reduced. | <Ref. to TPM(diag)-21, DTC 11 TIRE 1 AIR PRESSURE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 12 | Tire 2 Air Pressure Decrease | Tire pressure of tire 2 is reduced. | <Ref. to TPM(diag)-21, DTC 12 TIRE 2 AIR PRESSURE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 13 | Tire 3 Air Pressure Decrease | Tire pressure of tire 3 is reduced. | <Ref. to TPM(diag)-21, DTC 13 TIRE 3 AIR PRESSURE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 14 | Tire 4 Air Pressure Decrease | Tire pressure of tire 4 is reduced. | <Ref. to TPM(diag)-21, DTC 14 TIRE 4 AIR PRESSURE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 21 | Transmitter 1 No Data | Data cannot be received from transmitter 1. | <Ref. to TPM(diag)-22, DTC 21 TRANSMITTER 1 NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 22 | Transmitter 2 No Data | Data cannot be received from transmitter 2. | <Ref. to TPM(diag)-22, DTC 22 TRANSMITTER 2 NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 23 | Transmitter 3 No Data | Data cannot be received from transmitter 3. | <Ref. to TPM(diag)-22, DTC 23 TRANSMITTER 3 NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 24 | Transmitter 4 No Data | Data cannot be received from transmitter 4. | <Ref. to TPM(diag)-23, DTC 24 TRANSMITTER 4 NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 31 | Transmitter 1 Pressure Data Abnormal | Transmitter 1 data contents are abnormal. | <Ref. to TPM(diag)-24, DTC 31 TRANSMITTER 1 PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 32 | Transmitter 2 Pressure Data Abnormal | Transmitter 2 data contents are abnormal. | <Ref. to TPM(diag)-24, DTC 32 TRANSMITTER 2 PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 33 | Transmitter 3 Pressure Data Abnormal | Transmitter 3 data contents are abnormal. | <Ref. to TPM(diag)-24, DTC 33 TRANSMITTER 3 PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 34 | Transmitter 4 Pressure Data Abnormal | Transmitter 4 data contents are abnormal. | <Ref. to TPM(diag)-25, DTC 34 TRANSMITTER 4 PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 41 | Transmitter 1 Function Code Abnormal | Function code has error. | <Ref. to TPM(diag)-26, DTC 41 TRANSMITTER 1 FUNCTION CODE ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |

List of Diagnostic Trouble Code (DTC)

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

| DTC | Item | Contents of diagnosis | Remarks |
|-----|--|---|---|
| 42 | Transmitter 2 Function Code Abnormal | Function code has error. | <Ref. to TPM(diag)-26, DTC 42 TRANSMITTER 2 FUNCTION CODE ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 43 | Transmitter 3 Function Code Abnormal | Function code has error. | <Ref. to TPM(diag)-26, DTC 43 TRANSMITTER 3 FUNCTION CODE ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 44 | Transmitter 4 Function Code Abnormal | Function code has error. | <Ref. to TPM(diag)-27, DTC 44 TRANSMITTER 4 FUNCTION CODE ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 51 | Transmitter 1 Battery Voltage Decrease | Transmitter battery voltage is low. | <Ref. to TPM(diag)-28, DTC 51 TRANSMITTER 1 BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 52 | Transmitter 2 Battery Voltage Decrease | Transmitter battery voltage is low. | <Ref. to TPM(diag)-28, DTC 52 TRANSMITTER 2 BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 53 | Transmitter 3 Battery Voltage Decrease | Transmitter battery voltage is low. | <Ref. to TPM(diag)-28, DTC 53 TRANSMITTER 3 BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 54 | Transmitter 4 Battery Voltage Decrease | Transmitter battery voltage is low. | <Ref. to TPM(diag)-28, DTC 54 TRANSMITTER 4 BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 61 | Vehicle Speed is Abnormal | Vehicle speed signal is not input to the control module when the vehicle speed is 6 km/h (3.7 MPH) or more. | <Ref. to TPM(diag)-29, DTC 61 VEHICLE SPEED IS ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |