

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

12.General Diagnostic Table

A: INSPECTION

Symptoms		Faulty parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	<ul style="list-style-type: none">• Improper tire pressure adjustment.• Punctured tire
Tire pressure warning light blinks 25 times and then illuminates.	Tire pressure monitoring system has malfunction.	<ul style="list-style-type: none">• Air pressure sensor malfunction• Air pressure sensor is out of battery.• TPMS & keyless entry control module is faulty.• Defective vehicle harness• Defective combination meter
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate.	<ul style="list-style-type: none">• Air pressure sensor malfunction• TPMS & keyless entry control module is faulty.• Defective combination meter

DIFFERENTIALS

DI

	Page
1. General Description	2
2. Differential Gear Oil	17
3. Front Differential Assembly	18
4. Rear Differential	19
5. Rear Differential Front Oil Seal	38
6. Rear Differential Side Oil Seal	40
7. Rear Differential Front Member	41
8. Rear Differential Mount Bushing	42
9. General Diagnostic Table	46