


Control Module I/O Signal

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

4. Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

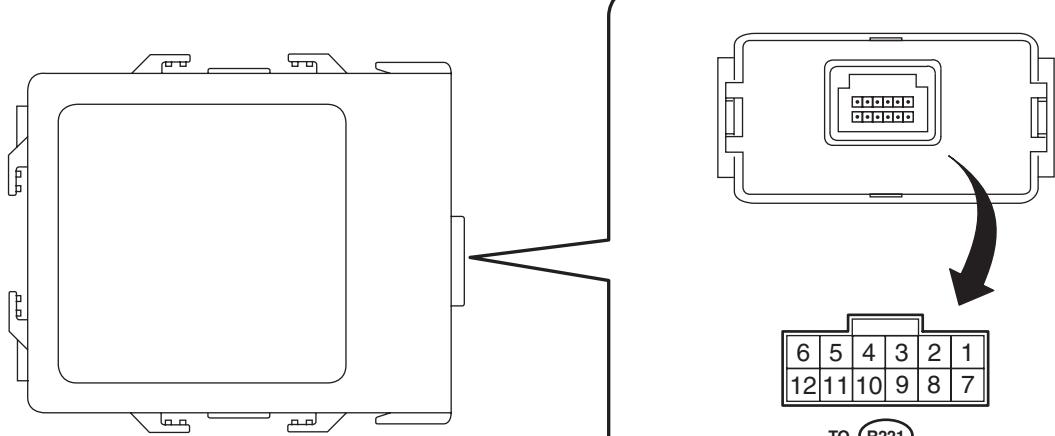

TPM00081

Terminal No.	Remarks	Measured value and measuring conditions	Remarks
1	—	—	—
2	Tire pressure warning light output	Illuminate when malfunction occurs, or tire pressure decreases	System failure: blinks 25 times → illuminates Tire pressure decreases: turns on
3	Speed sensor signal	While driving (Pulse signal)	Change according to vehicle speed
4	Ignition power supply	IG switch ON (Battery voltage)	—
5	Ground	0 V (Always)	—
6	Battery power supply	Battery voltage (always)	—
7	—	—	—
8	—	—	—
9	—	—	—
10	—	—	—
11	Body integrated unit	—	—
12	Select monitor communication	Serial communication	—

B: WIRING DIAGRAM

<Ref. to WI-64, WIRING DIAGRAM, Tire Pressure Monitoring System.>