

Read Diagnostic Trouble Code (DTC)

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

6. Read Diagnostic Trouble Code (DTC)

A: OPERATION

For details about reading of DTCs, refer to “Subaru Select Monitor”. <Ref. to TPM(diag)-7, Subaru Select Monitor.>