

5. Oil Seal

A: NOTE

For removal, installation and inspection, refer to
“4AT” or “5MT” section.

4AT model:

<Ref. to 4AT-43, Extension Case Oil Seal.>

5MT model:

<Ref. to 5MT-31, Oil Seal.>