


11.VDC OFF Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover.
- 2) Remove the screws, and then remove the VDC OFF switch.

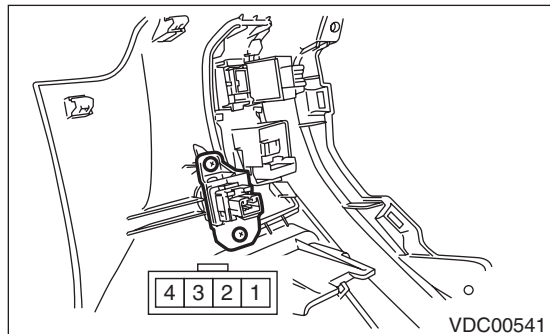

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Check the resistance between the VDC OFF switch terminals.

Switch position	Terminal No.	Standard
OFF	2 — 3	1 M Ω or more
ON	2 — 3	Less than 1 Ω

- 2) Replace the VDC OFF switch if the inspection result is not within the standard value.

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

VDC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	8
4. Electrical Component Location	10
5. Control Module I/O Signal	12
6. Subaru Select Monitor	16
7. Read Diagnostic Trouble Code (DTC)	23
8. Inspection Mode	24
9. Clear Memory Mode	25
10. Warning Light Illumination Pattern	26
11. List of Diagnostic Trouble Code (DTC)	35
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	41
13. General Diagnostic Table	105