


10. Reservoir Tank

A: REMOVAL

- 1) Disconnect the over flow hose connected to the radiator filler neck.
- 2) Push in the hook (A), and pull the reserve tank in the direction of the arrow to remove.

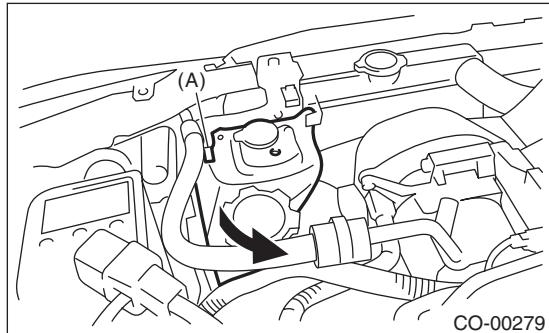

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the reservoir tank does not have deformation, cracks or damage.
- 2) Make sure the over flow hoses are not cracked, damaged or loose.
- 3) Make sure the engine coolant level is between "FULL" and "LOW".