



## 15. Drain Separator

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the rear differential. <Ref. to DI-19, REMOVAL, Rear Differential.>
- 3) Disconnect the drain hose from the connector.

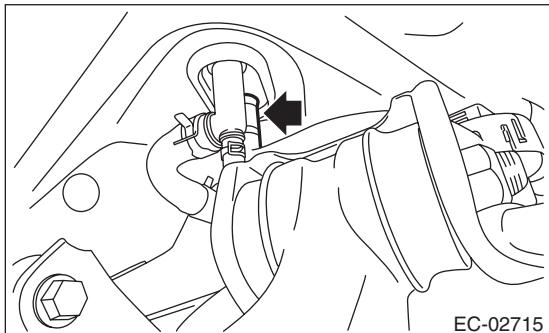

- 4) Remove the drain separator from the vehicle.

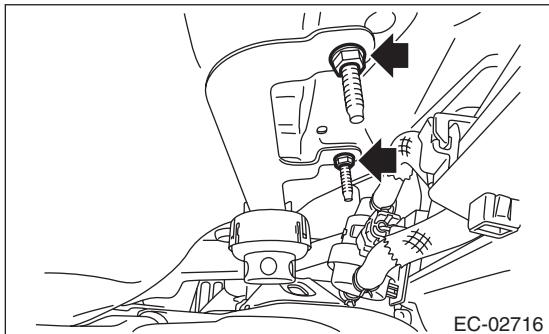


### B: INSTALLATION


- 1) Install the drain separator to the vehicle.

**Tightening torque:**

7.5 N·m (0.8 kgf·m, 5.5 ft-lb)

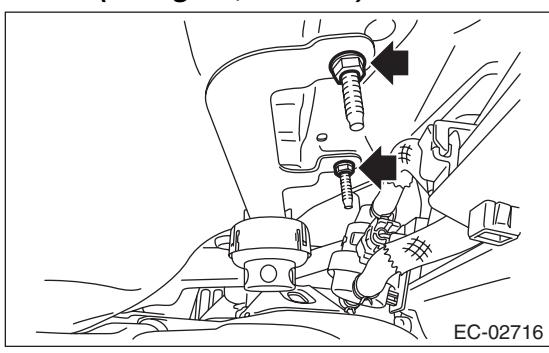


- 2) Connect the drain hose to the connector.

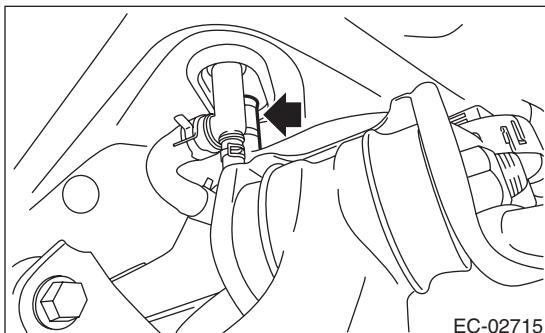


- 3) Install the rear differential. <Ref. to DI-21, INSTALLATION, Rear Differential.>

### C: DISASSEMBLY

- 1) Disconnect the drain hose from the drain separator.

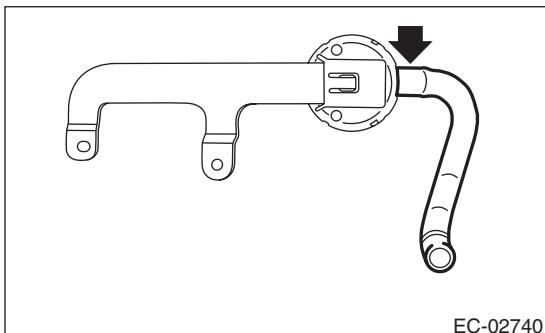

- 2) Lift up the claw (A) of the drain separator and slide the drain separator in the direction of the arrow to remove the drain separator.

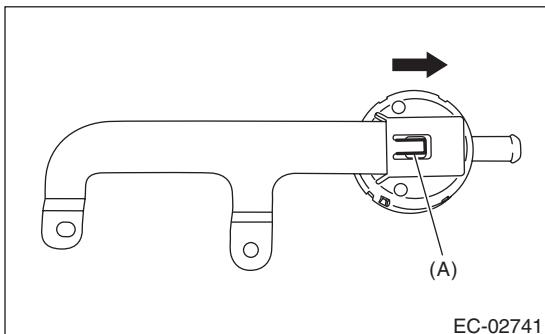

### D: ASSEMBLY

Assemble in the reverse order of disassembly.

### E: INSPECTION

- 1) Check that the drain separator and drain separator bracket have no deformation, crack, or other damage.
- 2) Check that the drain hose has no crack, damage, or looseness.
- 3) Check that no foreign substances are clogged in the drain separator.