


General Description

EXHAUST

1. General Description

A: COMPONENT

- 4 door model

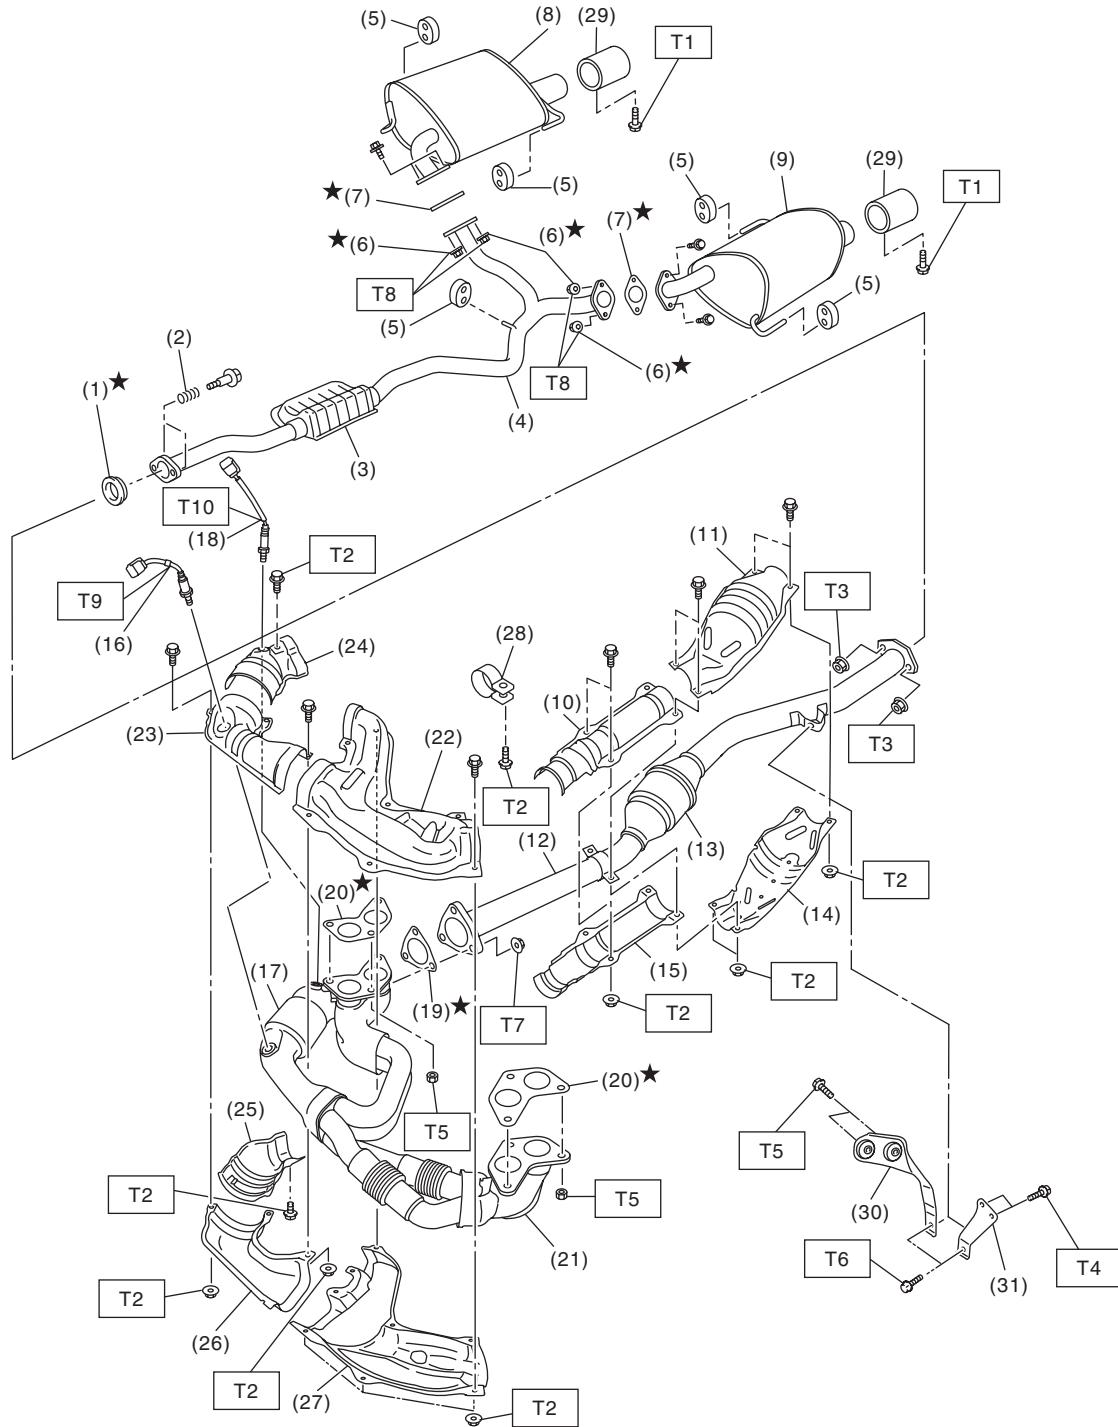

EX-02701

General Description


EXHAUST

(1) Gasket	(16) Front oxygen (A/F) sensor	(31) Hanger bracket (AT model)
(2) Spring	(17) Front catalytic converter	
(3) Chamber	(18) Rear oxygen sensor	
(4) Rear exhaust pipe	(19) Gasket	Tightening torque:N·m (kgf·m, ft·lb)
(5) Cushion rubber	(20) Gasket	T1: 7.5 (0.8, 5.5)
(6) Self-locking nut	(21) Front exhaust pipe	T2: 13 (1.3, 9.6)
(7) Gasket	(22) Front exhaust pipe upper cover LH	T3: 18 (1.8, 13.3)
(8) Muffler RH	(23) Front exhaust pipe upper cover RH	T4: 23 (2.3, 17.0)
(9) Muffler LH	(24) Front catalytic converter upper cover	T5: 30 (3.1, 22.1)
(10) Center exhaust pipe front upper cover	(25) Front catalytic converter lower cover	T6: 35 (3.6, 25.8)
(11) Rear catalytic converter upper cover	(26) Front exhaust pipe lower cover RH	T7: 40 (4.1, 29.5)
(12) Center exhaust pipe	(27) Front exhaust pipe lower cover LH	T8: 48 (4.9, 35.4)
(13) Rear catalytic converter	(28) Band	T9: <Ref. to FU(H4SO)-42, INSTALLATION, Front Oxygen (A/F Sensor.>
(14) Rear catalytic converter lower cover	(29) Muffler cutter (Models with muffler cutter)	T10: <Ref. to FU(H4SO)-44, INSTALLATION, Rear Oxygen Sensor.>
(15) Center exhaust pipe front lower cover	(30) Hanger bracket (MT model)	

General Description

EXHAUST

- 5 door model

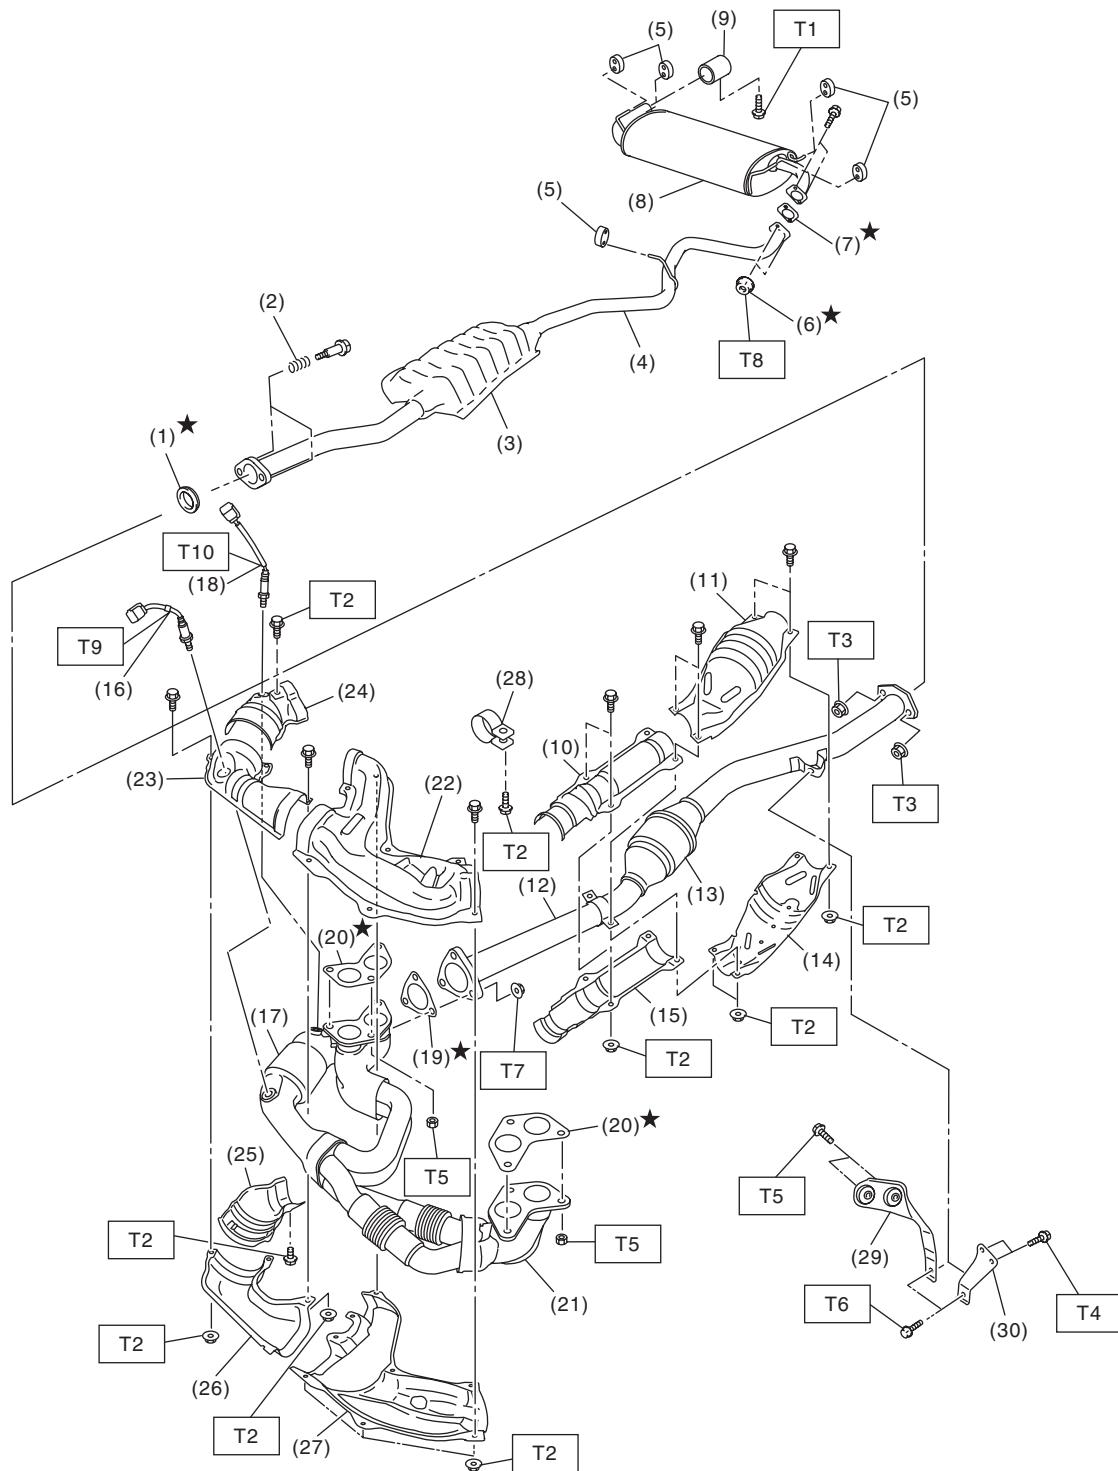

EX-02702

General Description

EXHAUST

(1) Gasket	(15) Center exhaust pipe front lower cover	(29) Hanger bracket (MT model)
(2) Spring	(16) Front oxygen (A/F) sensor	(30) Hanger bracket (AT model)
(3) Chamber	(17) Front catalytic converter	
(4) Rear exhaust pipe	(18) Rear oxygen sensor	
(5) Cushion rubber	(19) Gasket	Tightening torque:N·m (kgf·m, ft·lb)
(6) Self-locking nut	(20) Gasket	T1: 7.5 (0.8, 5.5)
(7) Gasket	(21) Front exhaust pipe	T2: 13 (1.3, 9.6)
(8) Muffler	(22) Front exhaust pipe upper cover LH	T3: 18 (1.8, 13.3)
(9) Muffler cutter (Models with muffler cutter)	(23) Front exhaust pipe upper cover RH	T4: 23 (2.3, 17.0)
(10) Center exhaust pipe front upper cover	(24) Front catalytic converter upper cover	T5: 30 (3.1, 22.1)
(11) Rear catalytic converter upper cover	(25) Front catalytic converter lower cover	T6: 35 (3.6, 25.8)
(12) Center exhaust pipe	(26) Front exhaust pipe lower cover RH	T7: 40 (4.1, 29.5)
(13) Rear catalytic converter	(27) Front exhaust pipe lower cover LH	T8: 48 (4.9, 35.4)
(14) Rear catalytic converter lower cover	(28) Band	T9: <Ref. to FU(H4SO)-42, INSTALLATION, Front Oxygen (A/F) Sensor.>
		T10: <Ref. to FU(H4SO)-44, INSTALLATION, Rear Oxygen Sensor.>

B: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.
- If any fat adheres to the exhaust pipe, wipe it off. Otherwise a fire may happen.