



14. Oil Temperature Sensor

A: REMOVAL


- 1) Disconnect the ground cable from battery.

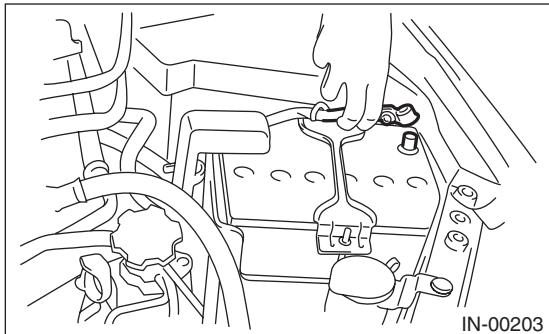

- 2) Remove the air intake chamber. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
- 3) Remove the bolt, and remove the engine harness connector from the bulkhead harness connector and rear engine hanger.

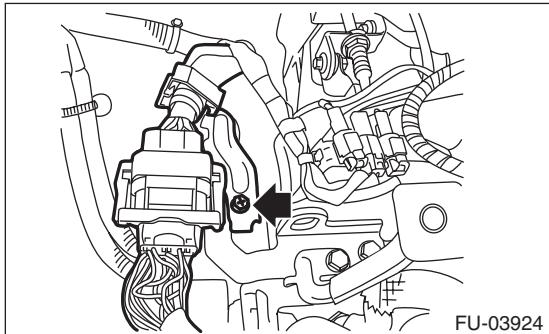

- 4) Disconnect the connector from oil temperature sensor.
- 5) Remove the oil temperature sensor.

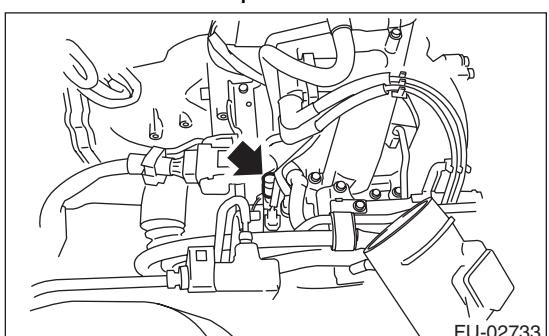

B: INSTALLATION

Install in the reverse order of removal.

NOTE:


Apply liquid gasket to the oil temperature sensor threads.

Liquid gasket:

THREE BOND 1324 (Part No. 004403042) or equivalent


Tightening torque:

18 N·m (1.8 kgf-m, 13.3 ft-lb)

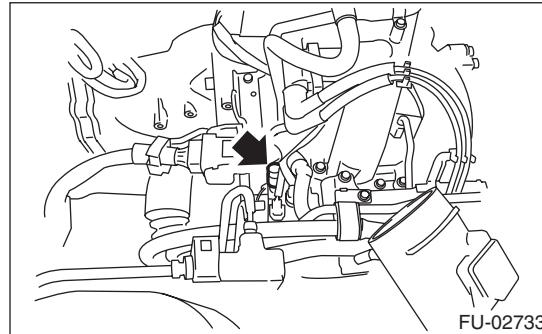


Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

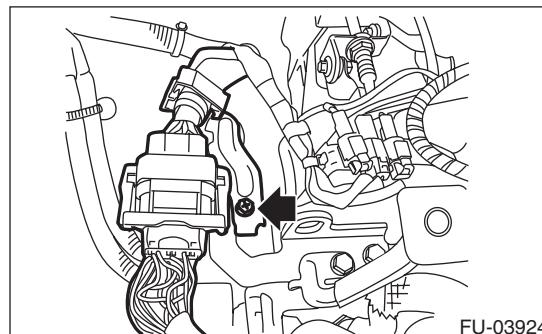

C: INSPECTION

- 1) Check that the oil temperature sensor has no deformation, cracks or other damages.
- 2) Check the resistance between the oil temperature sensor terminals.

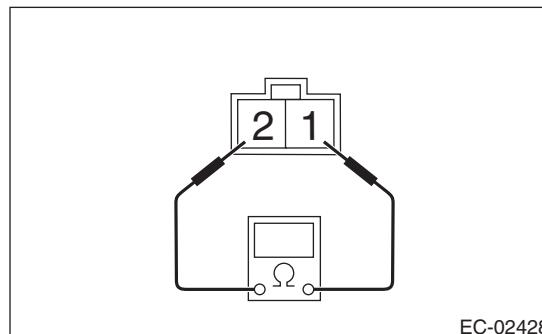

Terminal No.	Standard
1 and 2	2.45 ± 0.2 (When 20°C (68°F))