


18. Main Relay

A: REMOVAL

1) Disconnect the ground cable from battery.

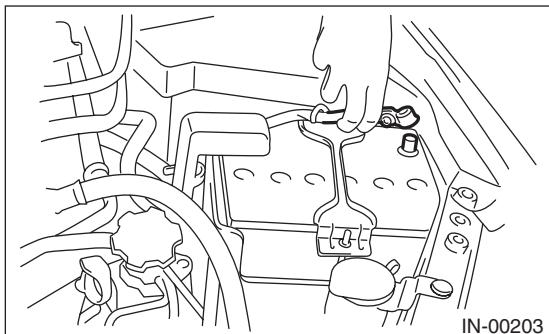

2) Remove the main relay from the relay block on the back side of the glove box.




B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the main relay has no deformation, cracks or other damages.
- 2) Measure the resistance between main relay terminals.

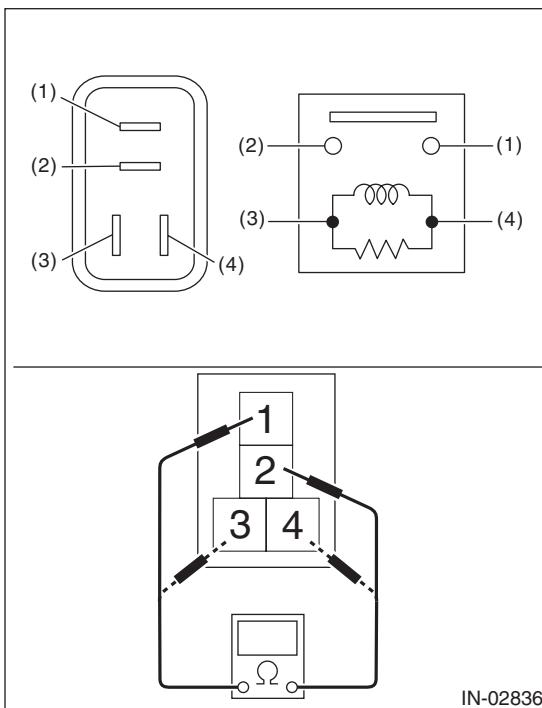


Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	130.4 — 230.8 Ω (When 20°C (68°F))

Main Relay

FUEL INJECTION (FUEL SYSTEMS)

3) Connect terminal No. 3 to battery positive terminal and terminal No. 4 to the battery ground terminal, and check the resistance between the main relay terminals.

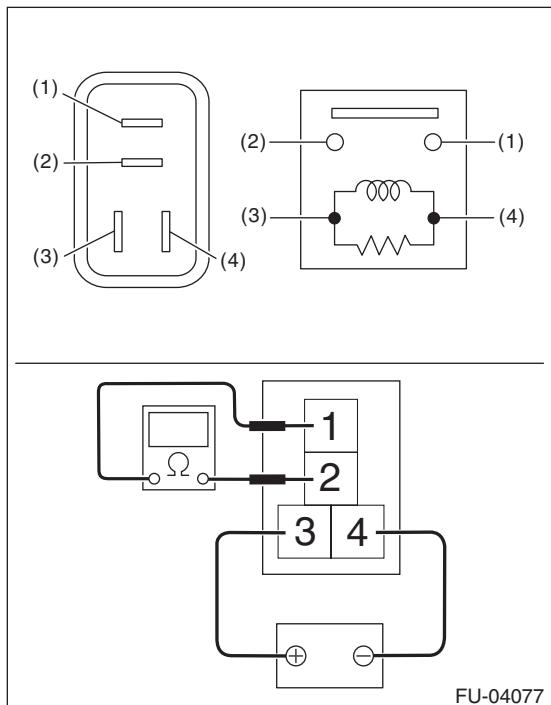

FU-04077

Terminal No.	Standard
1 and 2	Less than 1 Ω