

General Description


IGNITION

1. General Description

A: SPECIFICATION

Item			Specifications
Ignition coil & ignitor assembly	Type		
	Manufacturer		
	Secondary coil resistance		
Spark plug	Manufacturer and type		
	Thread size (diameter, pitch, length)	mm	14, 1.25, 19
	Spark plug gap	mm (in) Standard	1.0 — 1.1 (0.039 — 0.043)
	Electrode		

B: COMPONENT

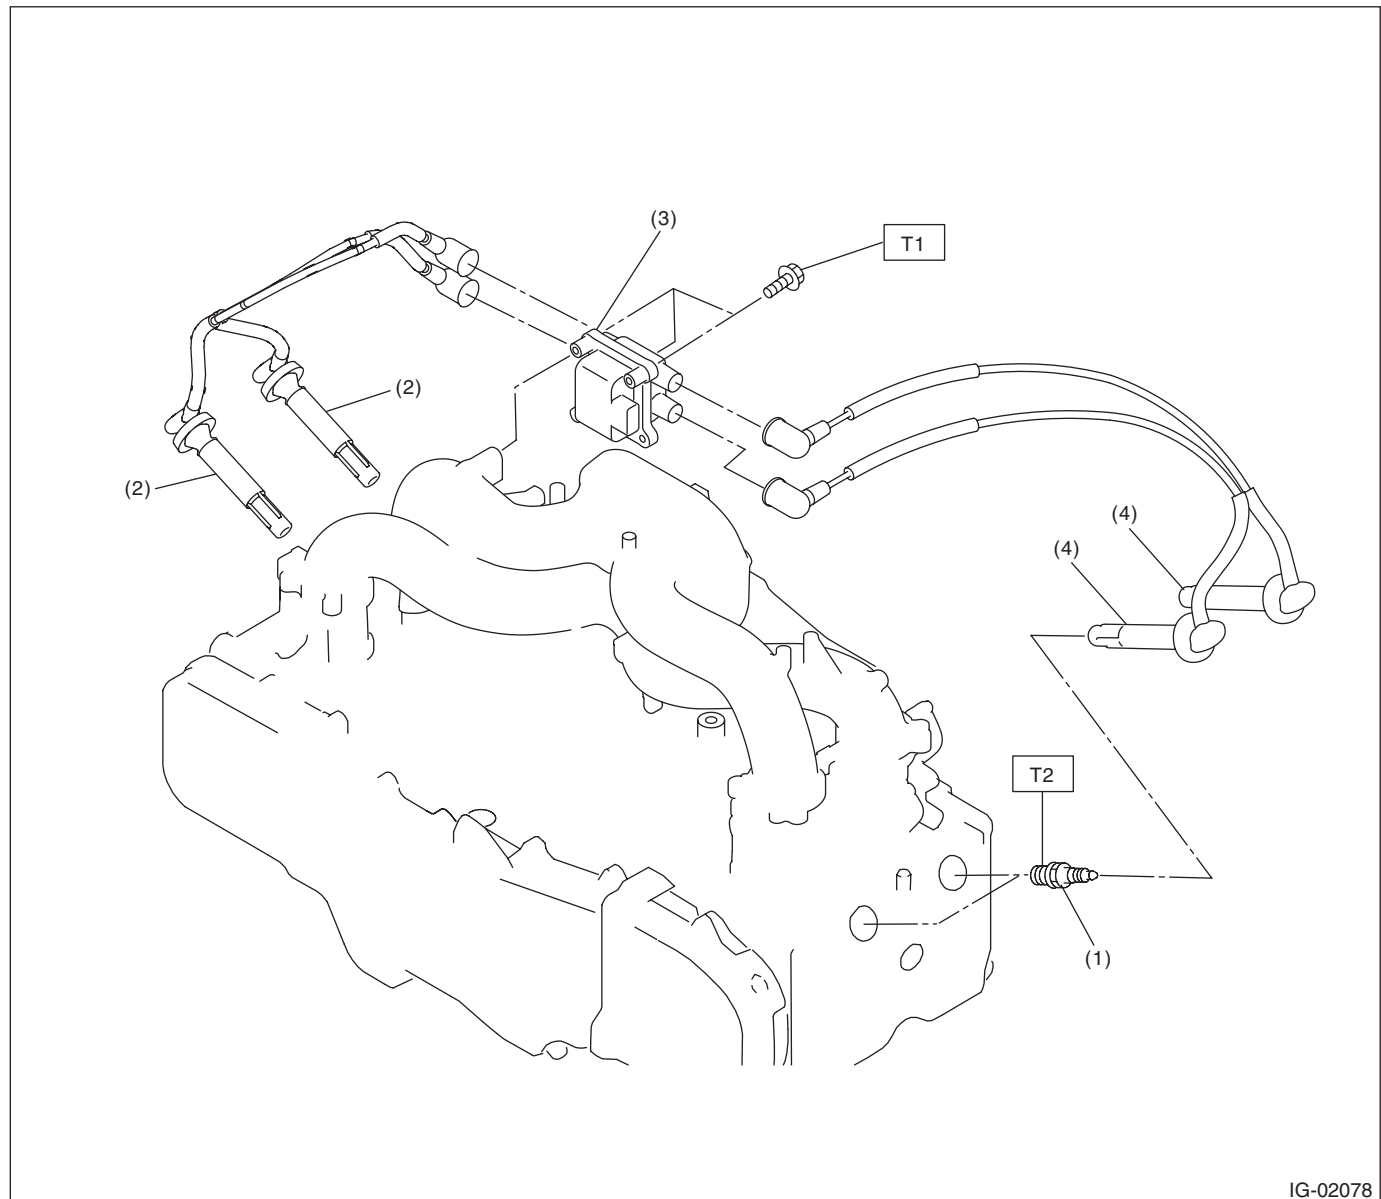

IG-02078

- (1) Spark plug
- (2) Spark plug cord (#1, #3)
- (3) Ignition coil and ignitor ASSY

- (4) Spark plug cord (#2, #4)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.9)
T2: 21 (2.1, 15.5)

C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.

D: PREPARATION TOOL**1. GENERAL TOOL**

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance.