


INTAKE (INDUCTION)


2. Air Cleaner Element

A: REMOVAL

- 1) Disconnect the ground cable from battery.

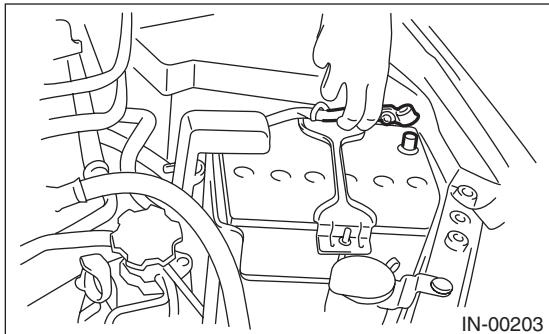


- 2) Disconnect the connector (A) from the mass air flow and intake air temperature sensor, and remove the clip (B).

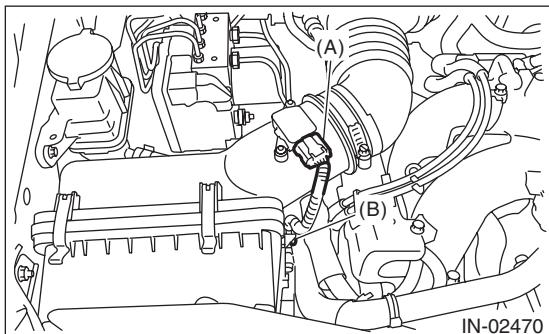


- 3) Loosen the clamp (A) which connects the air cleaner case to intake boot.

- 4) Remove the clips (B) securing the upper side of air cleaner case.

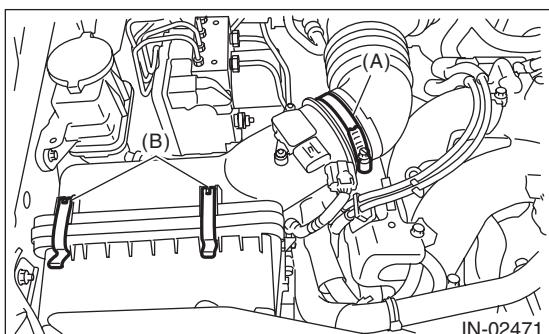

- 5) Remove the air cleaner case (rear) and air cleaner element.

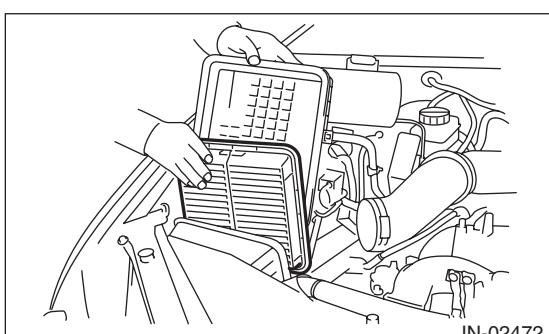

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to use SUBARU genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Using other air cleaner element may affect the engine performance.

NOTE:


- Check that there are no foreign objects in the air cleaner case.
- When installing the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the hole on the air cleaner case (front) to install.

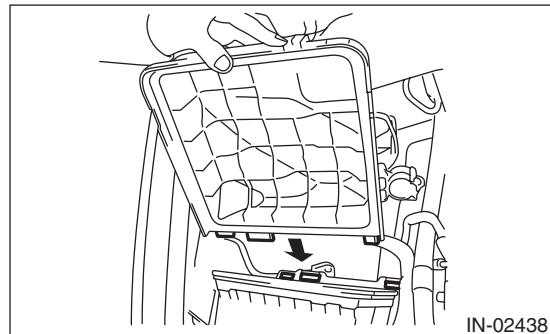

Tightening torque:

Clamp (A)

3 N·m (0.3 kgf·m, 2.2 ft-lb)

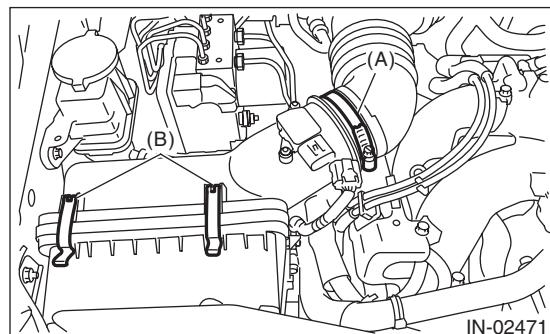

C: INSPECTION

- 1) Check that the air cleaner element has no deformation, cracks or other damages.
- 2) Check the air cleaner element for excessive dirt.