

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for the removal procedure. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

Resonator Chamber

INTAKE (INDUCTION)

MECHANICAL

ME(H4SO)

	Page
1. General Description	2
2. Compression	22
3. Idle Speed	23
4. Ignition Timing	24
5. Intake Manifold Vacuum	25
6. Engine Oil Pressure	26
7. Fuel Pressure	27
8. Valve Clearance	28
9. Engine Assembly	30
10. Engine Mounting	37
11. Preparation for Overhaul	38
12. V-belt	39
13. Crank Pulley	46
14. Timing Belt Cover	49
15. Timing Belt	50
16. Cam Sprocket	55
17. Crank Sprocket	56
18. Valve Rocker Assembly	57
19. Camshaft	60
20. Cylinder Head	65
21. Cylinder Block	74
22. Oil Switching Solenoid Valve	95
23. Intake and Exhaust Valve	97
24. Piston	98
25. Connecting Rod	99
26. Crankshaft	100
27. Engine Trouble in General	101
28. Engine Noise	107