



6. Oil Pressure Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.

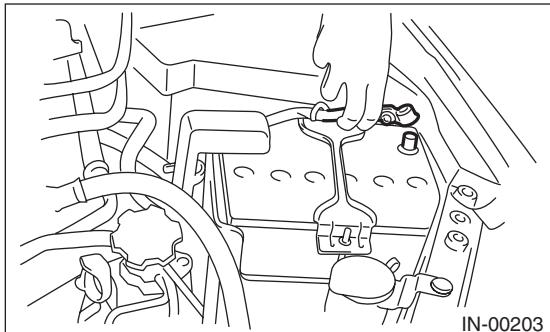

- 2) Remove the generator from the bracket. <Ref. to SC(H4SO)-16, REMOVAL, Generator.>
- 3) Disconnect the terminal from oil pressure switch.

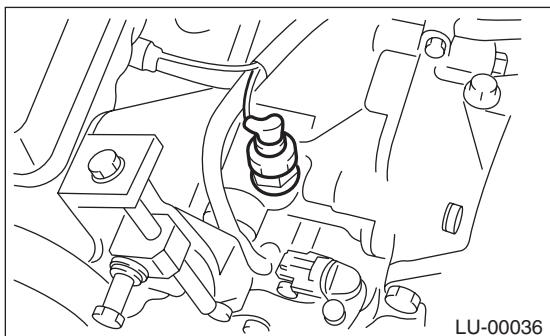

- 4) Remove the oil pressure switch.

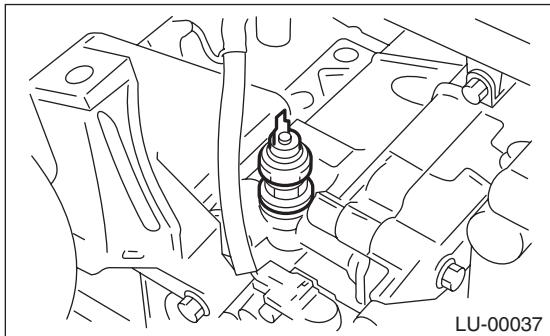


B: INSTALLATION

- 1) Apply liquid gasket to the oil pressure switch threads.

Liquid gasket:


THREE BOND 1324 (Part No. 004403042) or equivalent

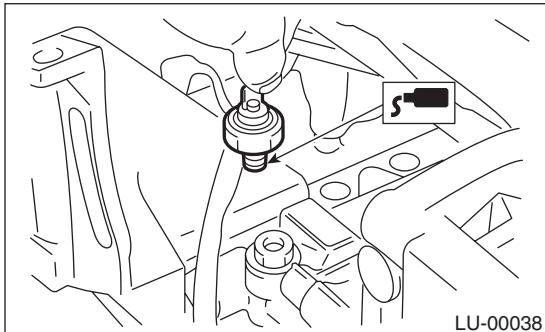


- 2) Install the oil pressure switch to cylinder block.

Tightening torque:

25 N·m (2.5 kgf·m, 18.4 ft-lb)

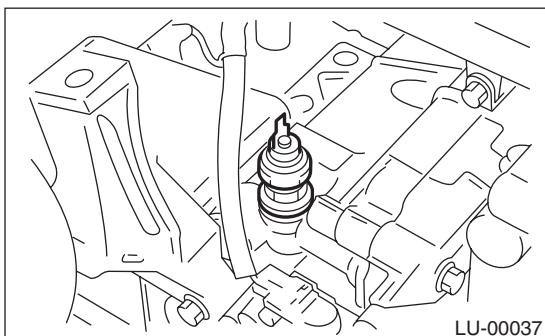

- 3) Connect the terminal to the oil pressure switch.

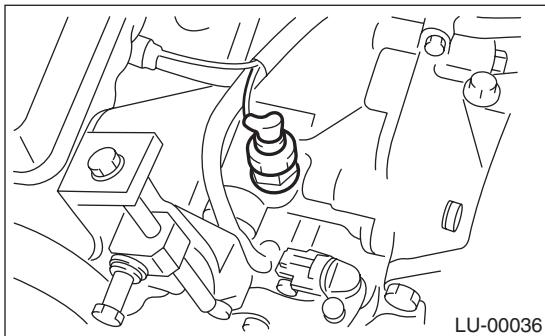


- 4) Install the generator to the bracket. <Ref. to SC(H4SO)-16, INSTALLATION, Generator.>

Oil Pressure Switch

LUBRICATION

- 5) Connect the ground cable to battery.

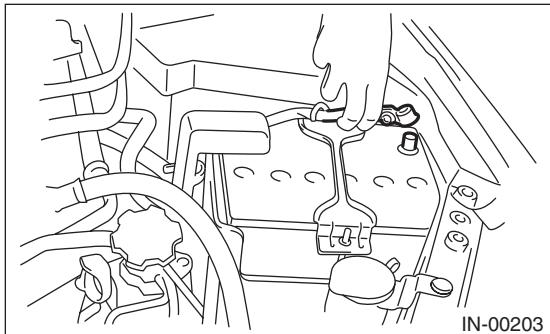

C: INSPECTION

- 1) Check that the oil pressure switch does not have deformation, cracks or damage.
- 2) Check the oil pressure switch installation portion for oil leakage and oil seepage.