

10. Engine Mounting

A: REMOVAL

- 1) Remove the engine assembly. <Ref. to ME(H4SO)-30, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from the engine assembly.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Engine mounting

35 N·m (3.6 kgf-m, 25.8 ft-lb)

C: INSPECTION

Check that the engine mounting does not have deformation, cracks and any other damage.