


## 14. Timing Belt Cover

### A: REMOVAL

- 1) Remove the crank pulley. <Ref. to ME(H4SO)-46, REMOVAL, Crank Pulley.>
- 2) Remove the timing belt cover LH (A).
- 3) Remove the front timing belt cover (B).

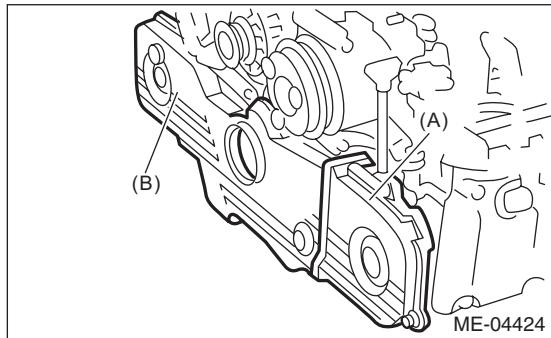

(A) Timing belt cover LH  
(B) Front timing belt cover

### B: INSTALLATION

- 1) Install the front timing belt cover (B).


**Tightening torque:**

**5 N·m (0.5 kgf-m, 3.7 ft-lb)**

- 2) Install the timing belt cover LH (A).

**Tightening torque:**

**5 N·m (0.5 kgf-m, 3.7 ft-lb)**

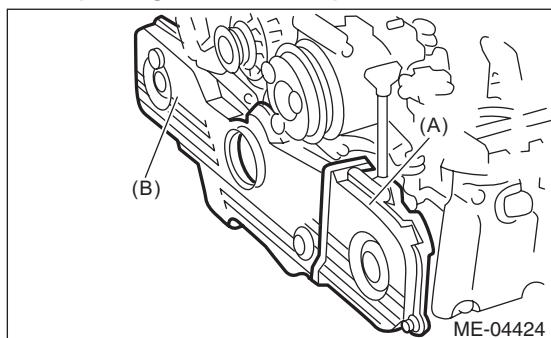

(A) Timing belt cover LH  
(B) Front timing belt cover

- 3) Install the crank pulley. <Ref. to ME(H4SO)-46, INSTALLATION, Crank Pulley.>

### C: INSPECTION

Check the timing belt cover for damage.