

## 24. Piston

### A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of pistons. <Ref. to ME(H4SO)-74, REMOVAL, Cylinder Block.> <Ref. to ME(H4SO)-78, INSTALLATION, Cylinder Block.>