


4. Battery

A: REMOVAL

- 1) Disconnect the positive (+) terminal after disconnecting the negative (-) terminal of battery.
- 2) Remove the harness clip from the battery rod.
- 3) Remove the flange nut from battery rod and remove battery holder.

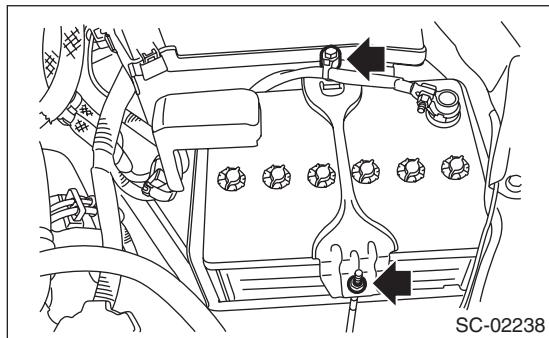

- 4) Remove the battery.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

3.5 N·m (0.4 kgf·m, 2.6 ft-lb)

NOTE:

- Clean the battery cable terminals and apply grease to retard the formation of corrosion.
- Connect the positive (+) terminal, and then connect the negative (-) terminal of the battery.
- After the battery is installed, initial diagnosis of the electronic throttle control is performed. Wait for 10 seconds or more after turning the ignition switch to ON, and then start the engine.

C: INSPECTION

WARNING:

- Electrolyte is corrosive acid, and has toxicity; be careful of handling the fluid.
- Make sure the electrode does not come into contact with skin, eyes or clothing. Especially at contact with eyes, flush with water for 15 minutes and get prompt medical attention.
- In addition, be careful not to let the electrode contact with the coated parts.
- Be careful when handling the batteries because they produce explosive gases.
- Be sure to keep battery away from any fire.
- For safety, in case an explosion does occur, wear eye protection or shield your eyes when working near any battery. In addition, never lean over the battery.
- Ventilate sufficiently when using or charging battery in enclosed space.

- Before starting work, remove rings, metal watch-bands, and other metal jewelry.
- Never allow metal tools to contact the positive battery terminal and anything connected to it while you are at the same time in contact with any other metallic portion of the vehicle.

1. EXTERNAL PARTS

Check the battery case, top cover, vent plugs, and terminal posts for dirt or cracks. If necessary, clean with water and wipe with a dry cloth.

Apply a thin coat of grease on the terminal posts to prevent corrosion.

2. ELECTROLYTE LEVEL

Check the electrolyte level in each cell. If the level is below MIN level, bring the level to MAX level by pouring distilled water into the battery cell. Do not fill beyond MAX level.

3. SPECIFIC GRAVITY OF ELECTROLYTE

- 1) Measure specific gravity of electrolyte using a hydrometer and a thermometer.

Specific gravity varies with temperature of electrolyte so that it must be corrected at 20°C (68°F) using the following calculation:

$$S_{20} = St + 0.0007 \times (t - 20)$$

S₂₀: Specific gravity corrected at electrolyte temperature of 20°C (68°F)


St: Measured specific gravity

t: Measured temperature (°C)

Judge whether or not the battery requires charging according to corrected specific gravity.

Standard specific gravity: 1.220 — 1.290 [at 20°C (68°F)]

- 2) Measuring the specific gravity of the electrolyte in the battery will disclose the state of charge of the battery. The relation between specific gravity and state of charge is as shown in the figure.

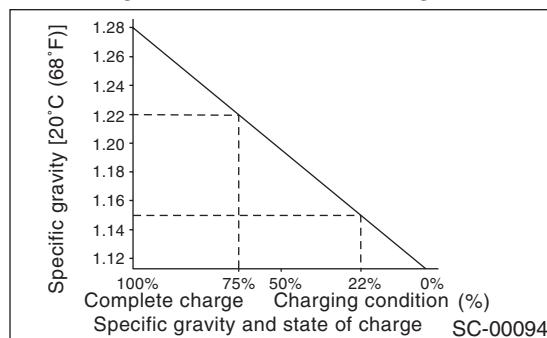

D: MEASUREMENT

WARNING:

Do not bring an open flame close to the battery when working.

CAUTION:

- Prior to charging, corroded terminals should be cleaned with a brush and common caustic soda solution.
- Be careful since battery electrolyte overflows while charging the battery.
- Observe instructions when handling the battery charger.
- Before charging the battery on the vehicle, disconnect the battery ground terminal to prevent damage of generator diodes or other electrical units.

1. JUDGEMENT OF BATTERY IN CHARGED CONDITION

- 1) Specific gravity of electrolyte should be held within the specific range of 1.250 — 1.290 for one hour or more.
- 2) Voltage per battery cell should be held at a specific value in a range of 2.5 — 2.8 V for one hour or more.

2. CHECK CONDITION OF CHARGE WITH HYDROMETER

| Hydrometer indicator | State of charge | Corrective action |
|----------------------|-----------------|--|
| Green dot | 65% or more | Load test |
| Dark dot | 65% or less | Charge battery |
| Clear dot | Low electrolyte | Replace the battery* (If cranking is difficult) |

* Check electrical system before replacement.

3. NORMAL CHARGING

Charge the battery at the current value specified by manufacturer or at approximately 1/10 of battery's ampere-hour rating.

4. QUICK CHARGING

CAUTION:

- Observe the items in "3. NORMAL CHARGING".

- Never use 10 A or more when charging the battery because it will shorten the battery life.

Quick charging is a method that the battery is charged in a short period of time with a relatively large current by using a quick charger.

Since a large current flow raises electrolyte temperature, the battery is subject to damage if the large current is used for prolonged time. For this reason, quick charging must be carried out within a current range that will not raise the electrolyte temperature to 40°C (104°F) or more.

Also the quick charging is a temporary mean to bring battery voltage up to some level, and battery should be charged slowly with low current as a rule.

Battery

STARTING/CHARGING SYSTEMS

ENGINE (DIAGNOSTICS)

EN(H4SO)(diag)

| | Page |
|--|------|
| 1. Basic Diagnostic Procedure | 2 |
| 2. Check List for Interview | 4 |
| 3. General Description | 6 |
| 4. Electrical Component Location | 9 |
| 5. Engine Control Module (ECM) I/O Signal | 18 |
| 6. Engine Condition Data | 27 |
| 7. Data Link Connector | 28 |
| 8. General Scan Tool | 29 |
| 9. Subaru Select Monitor | 33 |
| 10. Read Diagnostic Trouble Code (DTC) | 42 |
| 11. Inspection Mode | 43 |
| 12. Drive Cycle | 48 |
| 13. Clear Memory Mode | 55 |
| 14. Compulsory Valve Operation Check Mode | 56 |
| 15. System Operation Check Mode | 57 |
| 16. Malfunction Indicator Light | 60 |
| 17. Diagnostics for Engine Starting Failure | 70 |
| 18. Diagnostic Procedure for Subaru Select Monitor Communication | 84 |
| 19. List of Diagnostic Trouble Code (DTC) | 86 |
| 20. Diagnostic Procedure with Diagnostic Trouble Code (DTC) | 93 |
| 21. General Diagnostic Table | 317 |