


### 10. Transmission Mounting System

#### A: REMOVAL


##### 1. PITCHING STOPPER

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake chamber and intake boot.  
<Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
- 3) Remove the pitching stopper.

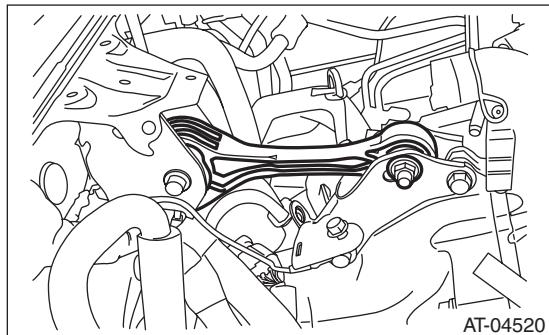

##### 2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the front, center and rear exhaust pipes and the muffler.  
<Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.> <Ref. to EX(H4SO)-9, REMOVAL, Center Exhaust Pipe.> <Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
- 4) Remove the heat shield cover.

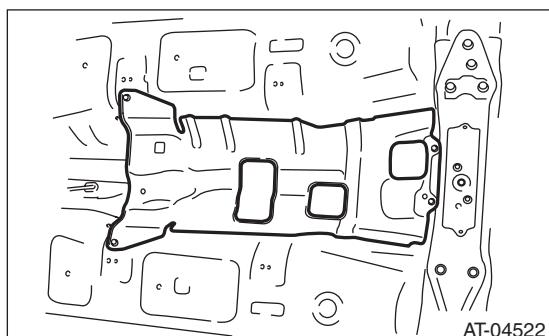


- 5) Set the transmission jack under transmission.

#### NOTE:

Make sure that the support plate of transmission jack does not touch the oil pan.

- 6) Remove the transmission rear crossmember.

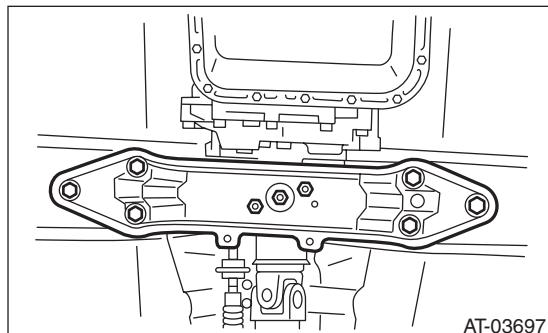

- 7) Remove the rear cushion rubber.

#### B: INSTALLATION


##### 1. PITCHING STOPPER

- 1) Install the pitching stopper.

#### *Tightening torque:*

T1: 50 N·m (5.1 kgf-m, 36.9 ft-lb)

T2: 58 N·m (5.9 kgf-m, 42.8 ft-lb)

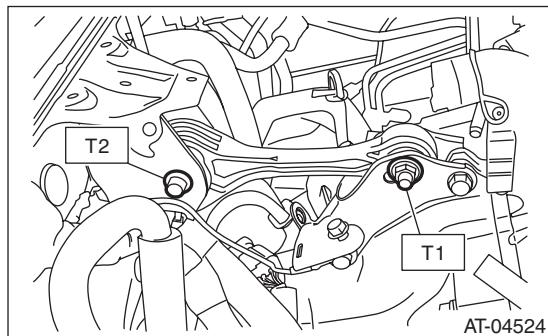

- 2) Install the air intake chamber and intake boot.  
<Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

##### 2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

- 1) Install the rear cushion rubber.

#### *Tightening torque:*


40 N·m (4.1 kgf-m, 29.5 ft-lb)

- 2) Install the transmission rear crossmember.

#### *Tightening torque:*

T1: 35 N·m (3.6 kgf-m, 25.8 ft-lb)


T2: 70 N·m (7.1 kgf-m, 51.6 ft-lb)

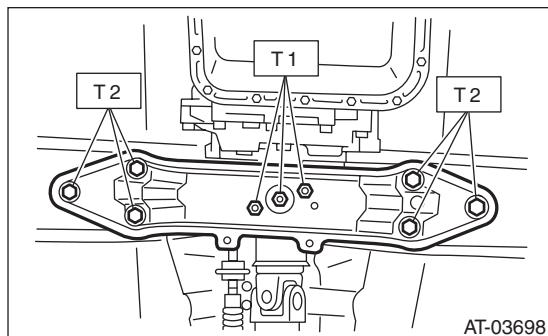

# Transmission Mounting System

## AUTOMATIC TRANSMISSION

- 3) Remove the transmission jack.
- 4) Install the heat shield cover.

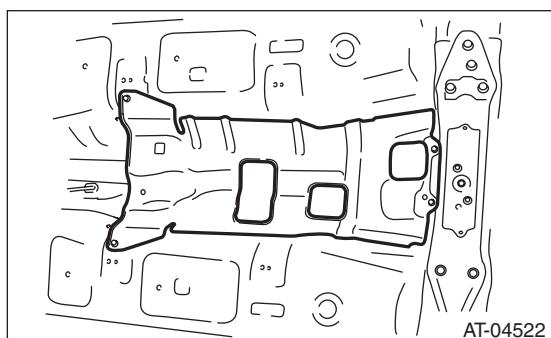

- 5) Install the front, center and rear exhaust pipes, and the muffler.

<Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.> <Ref. to EX(H4SO)-9, INSTALLATION, Center Exhaust Pipe.> <Ref. to EX(H4SO)-10, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-12, INSTALLATION, Muffler.>

- 6) Lower the vehicle.
- 7) Connect the battery ground terminal.

## C: INSPECTION

If problems are found in the following inspection, repair or replace the part.

### 1. PITCHING STOPPER

Make sure that the pitching stopper is not bent or damaged. Check that there are no cracks, hardening or damage on rubber parts.

### 2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

Make sure that the crossmember is not bent or damaged. Check that there are no cracks, hardening, or damage on cushion rubbers.