


21. Air Breather Hose

A: REMOVAL


- 1) Remove the air intake chamber. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
- 2) Disconnect the air breather hose.

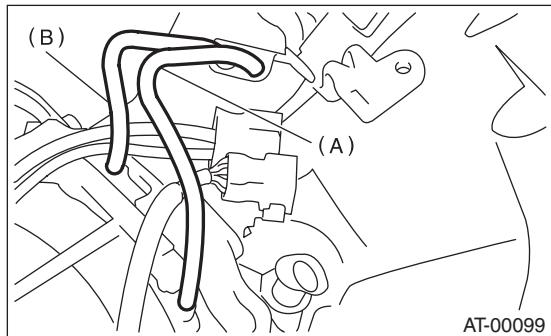

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

B: INSTALLATION

- 1) Install the air breather hose.

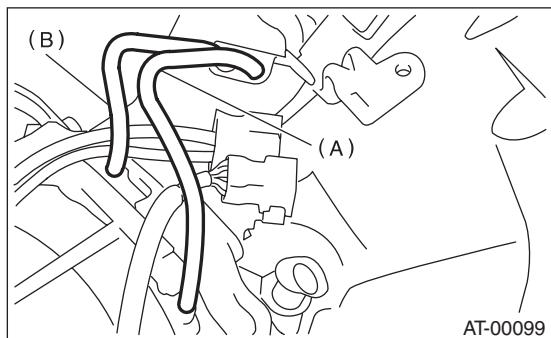

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

- 2) Install the air intake chamber. <Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

C: INSPECTION

Make sure the hose is not cracked or clogged.