


## 29. Parking Pawl

### A: REMOVAL


- 1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-34, REMOVAL, Automatic Transmission Assembly.>
- 2) Separate the extension case from the transmission case. <Ref. to 4AT-65, REMOVAL, Extension Case.>
- 3) Remove the reduction drive gear. <Ref. to 4AT-74, REMOVAL, Reduction Drive Gear.>
- 4) Remove the parking pawl, return spring and shaft.

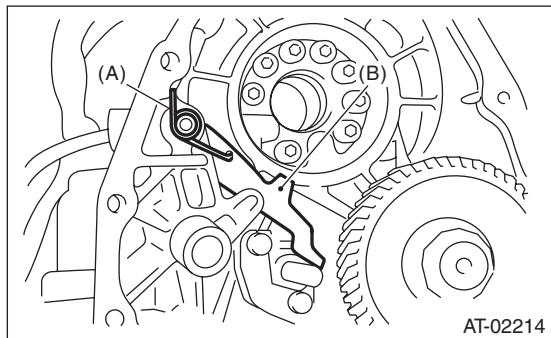

(A) Return spring  
(B) Parking pawl

### B: INSTALLATION

- 1) Install the parking pawl, return spring and shaft.

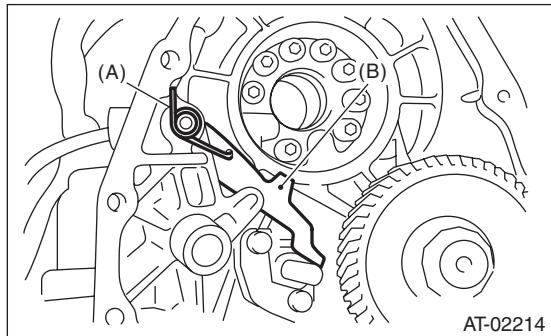

(A) Return spring  
(B) Parking pawl

- 2) Install the reduction drive gear. <Ref. to 4AT-74, INSTALLATION, Reduction Drive Gear.>
- 3) Install the extension case. <Ref. to 4AT-65, INSTALLATION, Extension Case.>
- 4) Install the transmission assembly to the vehicle. <Ref. to 4AT-37, INSTALLATION, Automatic Transmission Assembly.>

### C: INSPECTION

Check that the parking pawl tab on the reduction gear is not worn or otherwise damaged.