


35. Transmission Control Device

A: REMOVAL


- 1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-34, REMOVAL, Automatic Transmission Assembly.>
- 2) Pull out the torque converter clutch assembly. <Ref. to 4AT-63, REMOVAL, Torque Converter Clutch Assembly.>
- 3) Remove the input shaft.
- 4) Lift up the lever on the rear side of transmission harness connector, and then remove it from the stay.
- 5) Remove the inhibitor switch connector from the stay.
- 6) Disconnect the air breather hose. <Ref. to 4AT-61, REMOVAL, Air Breather Hose.>
- 7) Wrap vinyl tape around the nipple attached to the air breather hose.
- 8) Remove the pitching stopper bracket.
- 9) Remove the inhibitor switch. <Ref. to 4AT-46, REMOVAL, Inhibitor Switch.>
- 10) Remove the control valve body assembly. <Ref. to 4AT-54, REMOVAL, Control Valve Body.>
- 11) Pull out the manual plate spring pin.

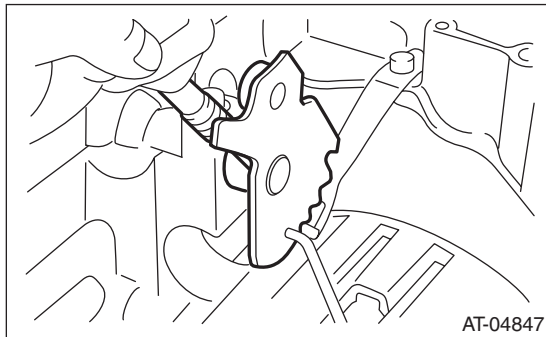

- 12) Remove the bolts securing select lever, and then remove the select lever, manual plate and parking rod.


NOTE:

Be careful not to damage the lips of press-fitted oil seal in the case.

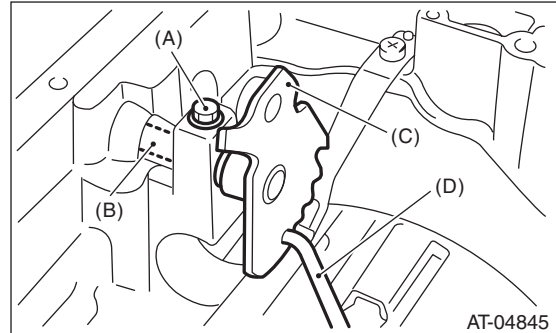

- (A) Bolt
- (B) Range select lever
- (C) Manual plate
- (D) Parking rod

- 13) Remove the detent spring.

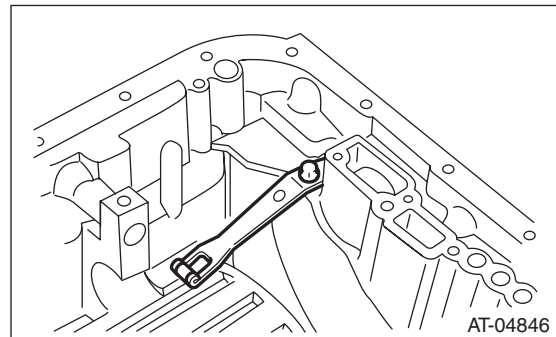


B: INSTALLATION

- 1) Install the detent spring to the transmission case.

Tightening torque:

6 N·m (0.6 kgf-m, 4.4 ft-lb)

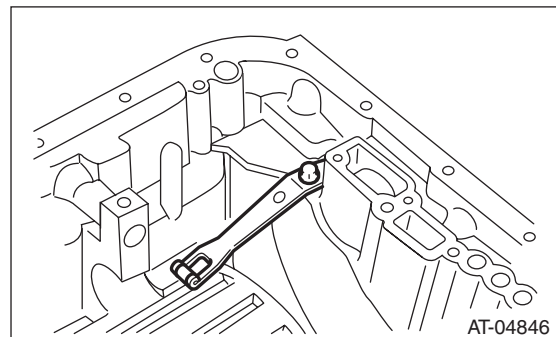


Transmission Control Device

AUTOMATIC TRANSMISSION


2) Insert the range select lever, and tighten the bolts.

Tightening torque:

6 N·m (0.6 kgf-m, 4.4 ft-lb)

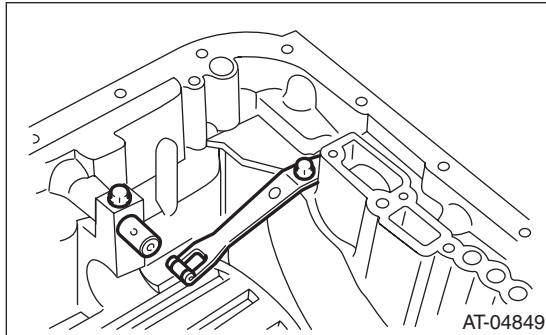


3) Insert the manual plate and parking rod.

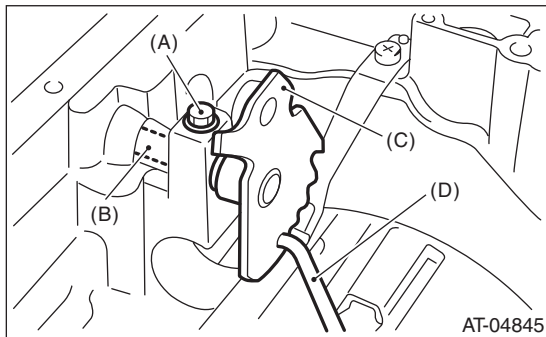

- (A) Bolt
- (B) Range select lever
- (C) Manual plate
- (D) Parking rod

4) Insert a new spring pin into the manual plate.

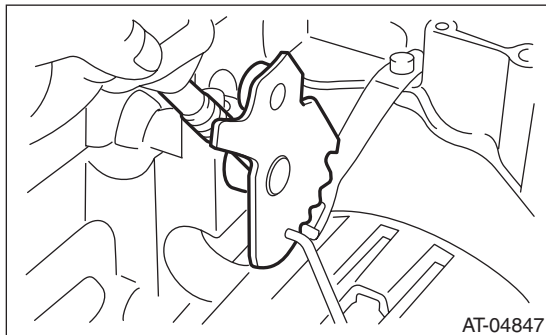

5) Install the oil pan and the control valve assembly. <Ref. to 4AT-55, INSTALLATION, Control Valve Body.>

6) Turn over the transmission case to its original position.


7) Install the pitching stopper bracket and transmission radio ground cord.

Tightening torque:

41 N·m (4.2 kgf-m, 30.2 ft-lb)

8) Install and adjust the inhibitor switch. <Ref. to 4AT-45, Inhibitor Switch.>

9) Insert the inhibitor switch connector and transmission harness connector onto the stay.

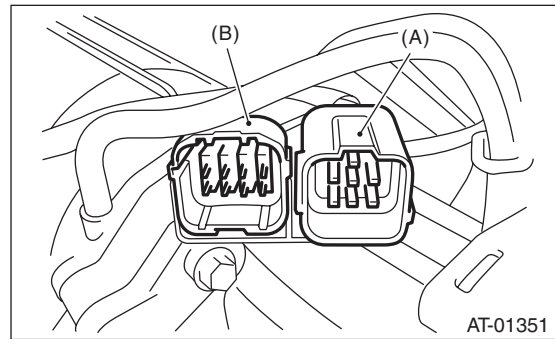


- (A) Transmission harness connectors
- (B) Inhibitor switch connector

10) Install the air breather hose. <Ref. to 4AT-61, INSTALLATION, Air Breather Hose.>

11) Insert the input shaft while rotating it lightly by hand, and then check the amount of protrusion.

Normal protrusion A:

50 — 55 mm (1.97 — 2.17 in)

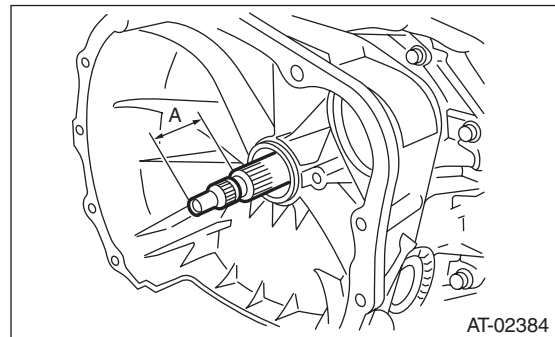

A Measured value

12) Install the torque converter clutch assembly. <Ref. to 4AT-63, INSTALLATION, Torque Converter Clutch Assembly.>

13) Install the transmission assembly to the vehicle. <Ref. to 4AT-37, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

Make sure that the manual lever and detent spring are not worn or otherwise damaged.

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

4AT(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	5
4. Electrical Component Location	7
5. Transmission Control Module (TCM) I/O Signal	12
6. Subaru Select Monitor	15
7. Read Current Data	16
8. Read Diagnostic Trouble Code (DTC)	17
9. Clear Memory Mode	18
10. Inspection Mode	19
11. Learning Control	20
12. AT OIL TEMP Warning Light Display	22
13. AWD Warning Light Display	25
14. Diagnostic Procedure for Subaru Select Monitor Communication	28
15. List of Diagnostic Trouble Code (DTC)	32
16. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	34
17. Diagnostic Procedure without Diagnostic Trouble Code (DTC)	77
18. Diagnostics with Phenomenon	85