

### 9. Clear Memory Mode

#### A: OPERATION

- 1) Shift the select lever to “P” range.
- 2) Using the Subaru Select Monitor, on the «Main Menu» display, select {Each System Check}.
- 3) On «System Selection Menu» display, select {Transmission Control System}.
- 4) After transmission type information is displayed, select [OK].
- 5) On «Transmission Diagnosis» display, select {Clear Memory}.
- 6) When “Done. Turn off the ignition switch.” is displayed, select [OK].
- 7) Turn the ignition switch to OFF. To turn the ignition switch to ON again, wait for 10 seconds or more.
- 8) Turn the Subaru Select Monitor to OFF.

#### NOTE:

- If {Clear Memories 2} is executed, DTCs and learned control memory are cleared.
- If {Clear Memories 2} is executed, perform learning. <Ref. to 4AT(diag)-20, Learning Control.>