

General Diagnostic Table

CONTROL SYSTEMS

8. General Diagnostic Table

A: INSPECTION

Symptoms	Possible cause	Corrective action
Select lever	Starter does not run.	Adjust the select cable and inhibitor switch, or inspect the circuit.
	Back-up light does not illuminate.	Adjust the select cable and inhibitor switch, or inspect the circuit.
	AT shift lock system does not operate normally.	Adjust the select cable and inhibitor switch, or inspect the circuit.
	Manual mode can not be set.	Inspect the mode switch and select lever, or inspect the circuit.
	Up-shift is not engaged at manual mode.	Check the shift-up switch and circuit.
	Down-shift is not engaged at manual mode.	Check the shift-down switch and circuit.

AUTOMATIC TRANSMISSION

4AT

	Page
1. General Description	2
2. Automatic Transmission Fluid	26
3. Differential Gear Oil	28
4. Road Test	29
5. Stall Test	30
6. Time Lag Test	31
7. Line Pressure Test	32
8. Transfer Clutch Pressure Test	33
9. Automatic Transmission Assembly	34
10. Transmission Mounting System	41
11. Extension Case Oil Seal	43
12. Differential Side Retainer Oil Seal	44
13. Inhibitor Switch	45
14. Front Vehicle Speed Sensor	48
15. Torque Converter Turbine Speed Sensor	51
16. Control Valve Strainer	52
17. Control Valve Body	54
18. Air Bleeding of Control Valve	57
19. Transmission Control Module (TCM)	58
20. ATF Cooler Pipe and Hose	59
21. Air Breather Hose	61
22. Oil Charge Pipe	62
23. Torque Converter Clutch Assembly	63
24. Drive Plate	64
25. Extension Case	65
26. Transfer Clutch	67
27. Reduction Driven Gear	72
28. Reduction Drive Gear	74
29. Parking Pawl	76
30. Converter Case	77
31. Oil Pump Housing	79
32. Drive Pinion Shaft Assembly	85
33. Front Differential Assembly	91
34. AT Main Case	97
35. Transmission Control Device	119