

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

55.Engine Wiring Harness and Transmission Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
E2	54	Black	A-3	B21	Bulkhead wiring harness
E4	2	Black	B-3		Purge control solenoid valve
E5	2	Dark gray	B-1		Fuel injector No. 1
E6	2	Dark gray	A-2		Fuel injector No. 3
E8	2	Black	B-2		Engine coolant temperature sensor
E10	2	Light gray	B-3		Crankshaft position sensor
E11	1	—	B-2		Oil pressure switch
E12	4	Black	A-2		Ignition coil & ignitor assembly
E14	2	Gray	B-4		Knock sensor
E15	2	Black	B-4		Camshaft position sensor
E16	2	Dark gray	B-4		Fuel injector No. 2
E17	2	Dark gray	B-4		Fuel injector No. 4
E18	6	Dark gray	A-4		EGR valve
E19	1	★	B-2		Power steering oil pressure switch
E21	3	Black	A-4		Manifold absolute pressure sensor
E22	6	Black	A-1		Front oxygen (A/F) sensor
E23	4	Dark gray	A-1		Rear oxygen sensor
E57	6	Black	A-3		Electronic throttle control
E61	2	Dark gray	A-3		PCV diagnosis connector
E67	2	Blue	A-2		Oil switching solenoid valve RH
E68	2	Blue	B-4		Oil switching solenoid valve LH
E71	1	★	A-2		Variable valve lift diagnosis oil pressure switch RH
E72	1	★	B-4		Variable valve lift diagnosis oil pressure switch LH
E75	2	Black	B-2		Oil temperature sensor


★ : White or natural color

• MT model

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
T1	2	Gray	D-2	B24	Bulkhead wiring harness
T2	2	Brown	D-2	B25	

• AT model

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
T3	12	Black	D-4	B12	Bulkhead wiring harness
T4	20	Light gray	D-4	B11	
T7	9	Black	D-5		Inhibitor switch

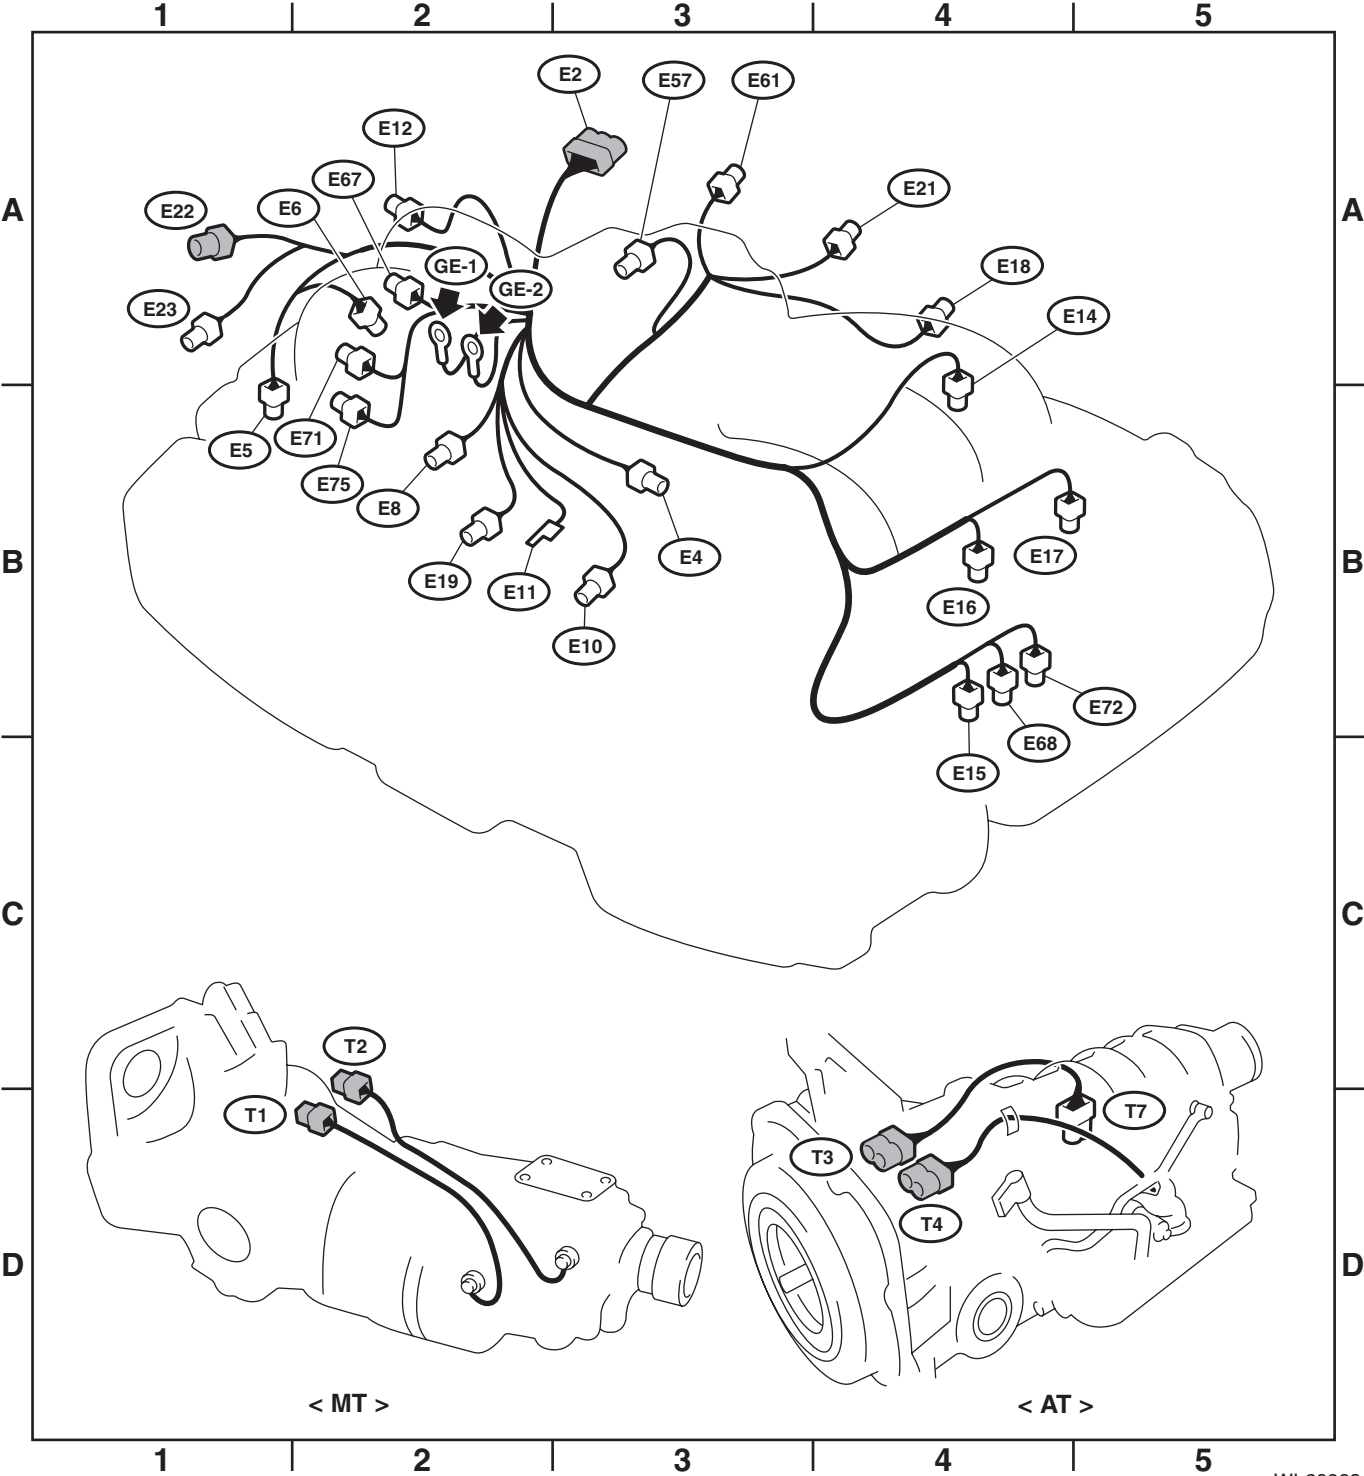

WI-29923