

## 8. Curtain Airbag Module

### A: REMOVAL

#### 1. 4 DOOR MODEL


**CAUTION:**

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-10, CAUTION, General Description.>


- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 3) Remove the trim panel - roof assembly. <Ref. to EI-116, 4 DOOR MODEL, REMOVAL, Roof Trim.>
- 4) Remove the curtain airbag module.

**CAUTION:**

- Be careful not to damage the curtain airbag module during removal.
- Never open the curtain airbag module before activation. Never reuse the deployed curtain airbag module.
- Remove the modules in order starting from the vehicle front.  
(1) Remove all the bolts and clips, and remove the curtain airbag module.

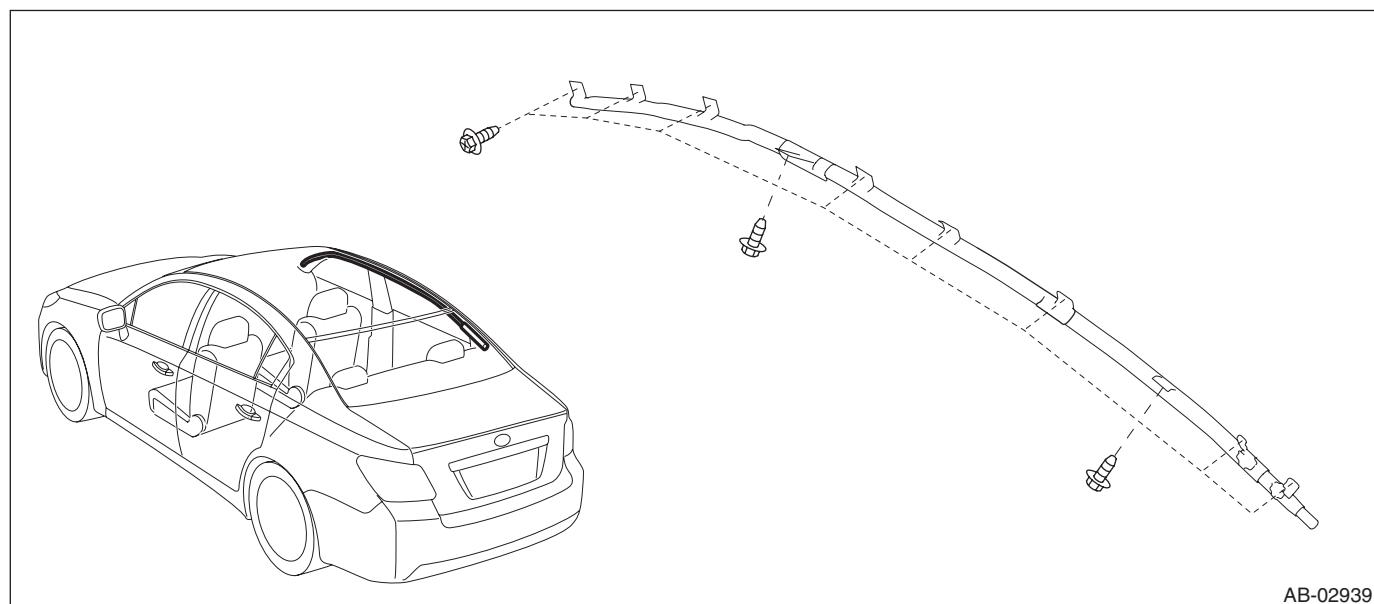

(2) Disconnect the curtain airbag module connector. <Ref. to AB-22, DRIVER'S AIRBAG MODULE, CURTAIN AIRBAG MODULE & PRETENSIONER, PROCEDURE, Airbag Connector.>

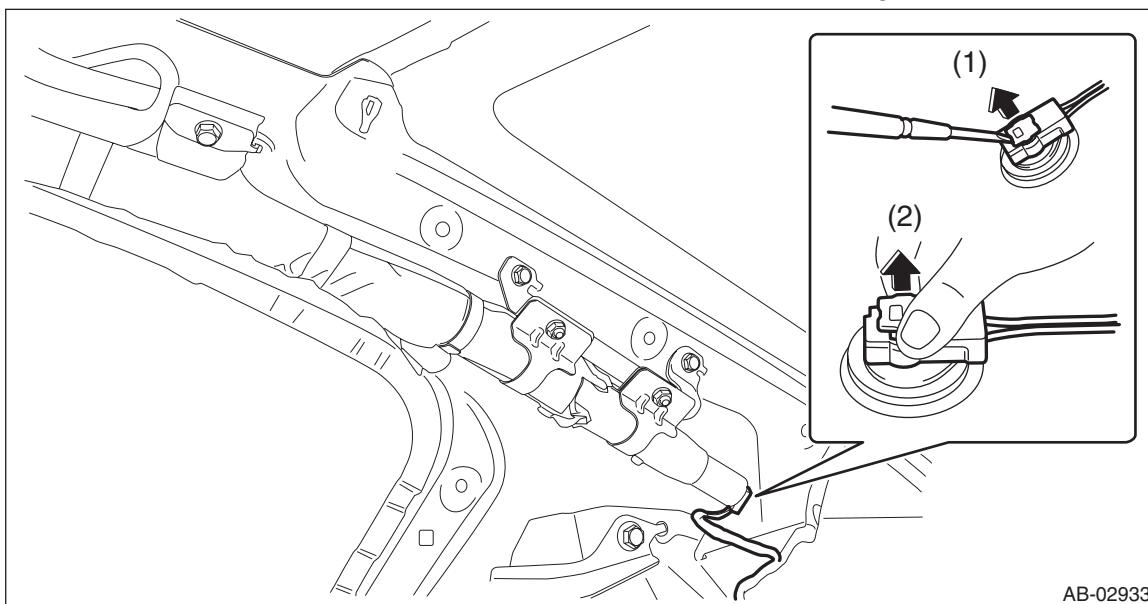

## 2. 5 DOOR MODEL

### CAUTION:


Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-10, CAUTION, General Description.>

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 3) Remove the trim panel - roof assembly. <Ref. to EI-126, 5 DOOR MODEL, REMOVAL, Roof Trim.>
- 4) Remove the curtain airbag module.

### CAUTION:

- Be careful not to damage the curtain airbag module during removal.
- Never open the curtain airbag module before activation. Never reuse the deployed curtain airbag module.
- Remove the modules in order starting from the vehicle front.


(1) Remove all the bolts and clips, and remove the curtain airbag module.

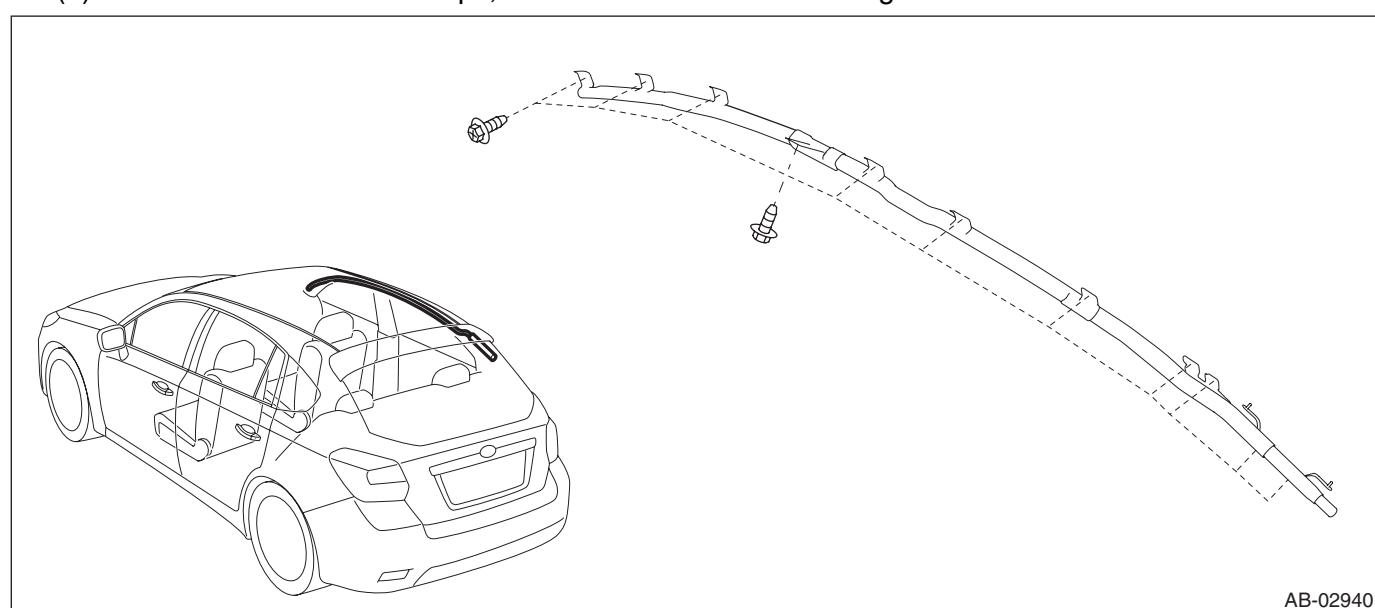

## Curtain Airbag Module

### AIRBAG SYSTEM

(2) Disconnect the curtain airbag module connector. <Ref. to AB-22, DRIVER'S AIRBAG MODULE, CURTAIN AIRBAG MODULE & PRETENSIONER, PROCEDURE, Airbag Connector.>

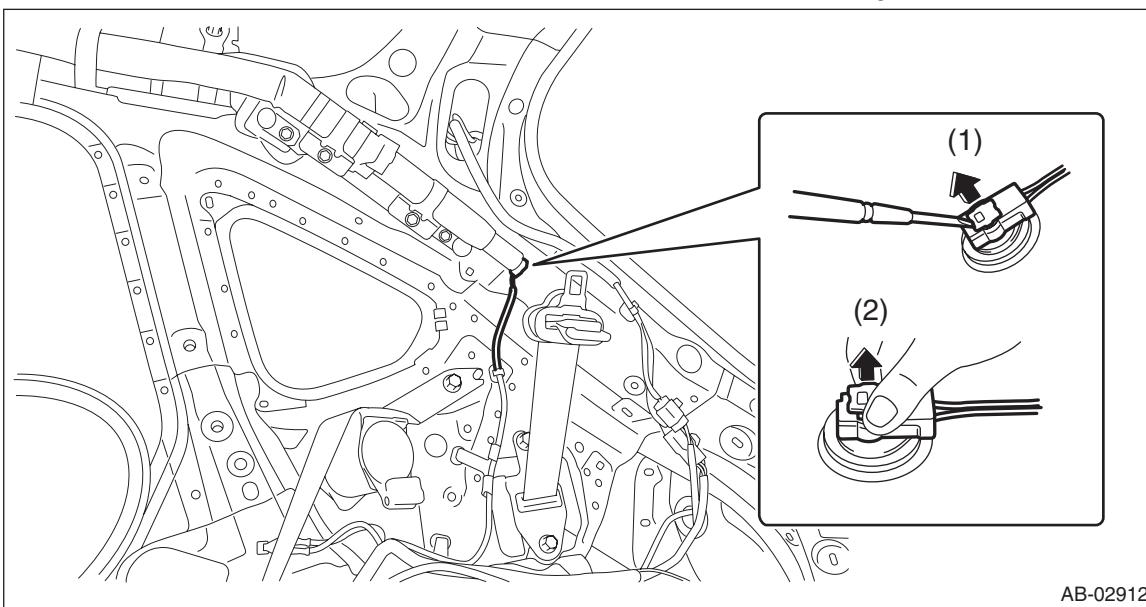

## B: INSTALLATION

### CAUTION:

- Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-10, CAUTION, General Description.>
- When installing the curtain airbag module, install a specified part at specified place.
- Be careful not to damage the curtain airbag module during installation.
- Never open the curtain airbag module before activation. Never reuse the deployed curtain airbag module.
- **Make sure that there are no foreign matter on airbag module.**

1) Before installation, inspect the following items and replace any faulty part with a new one.

- Airbag cover is scratched or torn.
- Harness and/or connector is cracked, deformed or open.
- Harness wire is exposed.
- Mounting bracket and securing clip are cracked or deformed.

2) Install each part in the reverse order of removal.

### *Tightening torque:*

**Curtain airbag module: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)**