


Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

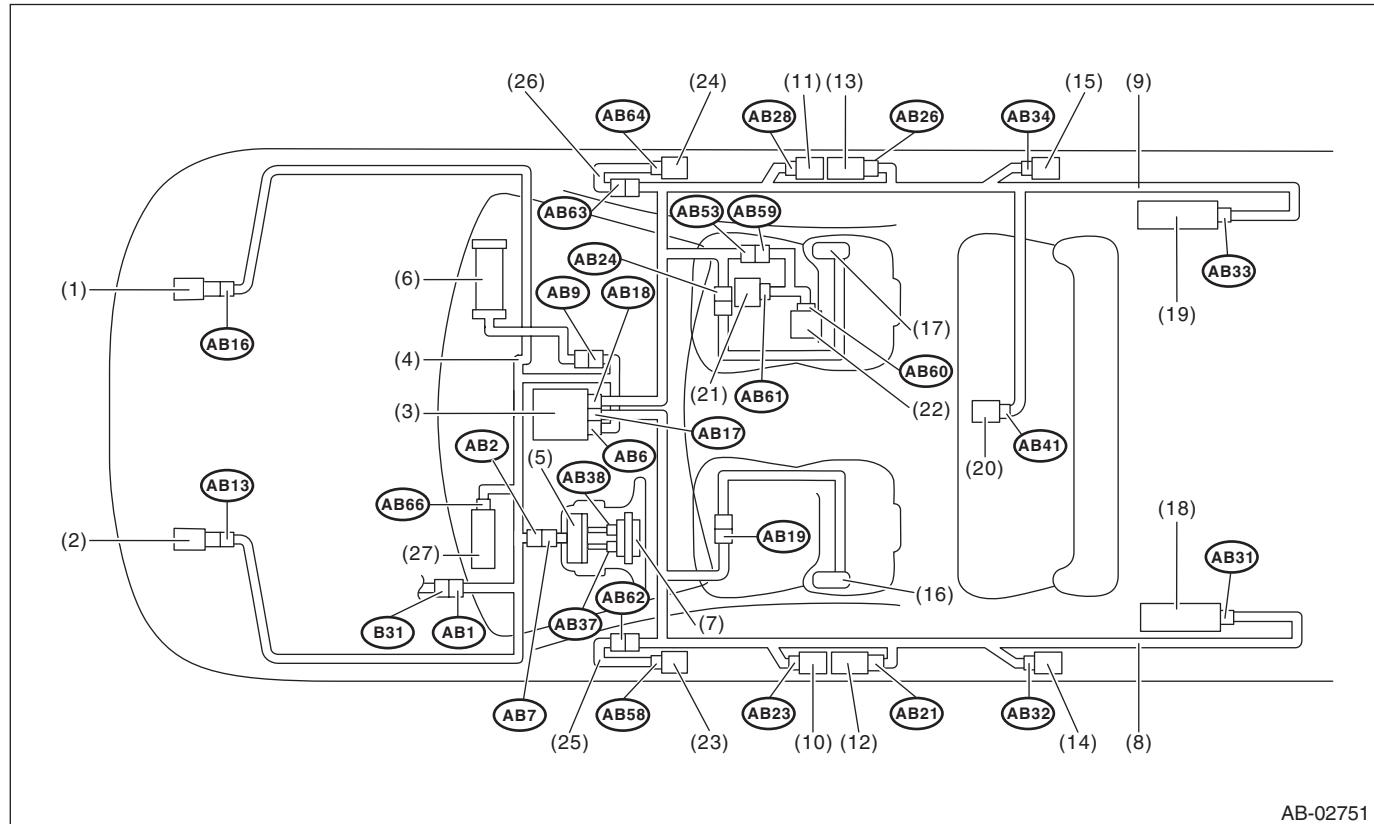

AB-02751

(1) Front sub sensor (RH)	(10) Side airbag sensor (LH)	(19) Curtain airbag inflator (RH)
(2) Front sub sensor (LH)	(11) Side airbag sensor (RH)	(20) Satellite safing sensor
(3) Airbag control module	(12) Seat belt pretensioner (LH)	(21) Occupant detection control module
(4) Airbag main harness	(13) Seat belt pretensioner (RH)	(22) Buckle switch (RH)
(5) Roll connector	(14) Curtain airbag sensor (LH)	(23) Front door impact sensor (LH)
(6) Passenger's airbag inflator	(15) Curtain airbag sensor (RH)	(24) Front door impact sensor (RH)
(7) Driver's airbag inflator	(16) Side airbag inflator (LH)	(25) Door harness (LH)
(8) Airbag rear harness (LH)	(17) Side airbag inflator (RH)	(26) Door harness (RH)
(9) Airbag rear harness (RH)	(18) Curtain airbag inflator (LH)	(27) Knee airbag inflator

Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB21)	(AB23)
Pin	10	4	30	4	4	2	2	15	15	4	2	4
Color	Gray	Yellow	Black	Yellow								
Male/Female	Female	Female	Female	Male	Female							
Connector No.	(AB24)	(AB26)	(AB28)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)	(AB41)	(AB53)	(AB58)
Pin	4	2	4	2	4	2	4	2	2	2	3	2
Color	Yellow	Black	Yellow	Black	Yellow	Black	Yellow	Orange	Black	Yellow	Brown	Yellow
Male/Female	Female											
★ : White or natural color												