

List of Diagnostic Trouble Code (DTC)

BODY CONTROL SYSTEM (DIAGNOSTICS)

12. List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Content of diagnosis	Note
None	Communication for Initializing Impossible	Subaru Select Monitor communication is open or shorted.	<Ref. to LAN(diag)-9, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Subaru Select Monitor.>
B1100	Integ. Unit System Error	Body integrated unit internal error	<Ref. to BC(diag)-23, DTC B1100 INTEG. UNIT SYSTEM ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1101	BATT P/Supply Malfunction Cont	Voltage malfunction caused by poor contact of battery power supply control circuits	<Ref. to BC(diag)-24, DTC B1101 BATT P/SUPPLY MALFUNCTION CONT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1102	BATT P/Supply Malfunction Backup	Voltage malfunction caused by poor contact of battery power supply backup circuits	<Ref. to BC(diag)-26, DTC B1102 BATT P/SUPPLY MALFUNCTION BACKUP, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1103	Ignition Power Failure	Voltage malfunction caused by poor contact of IGN power supply circuits	<Ref. to BC(diag)-28, DTC B1103 IGNITION POWER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1104	ACC Power Failure	Voltage malfunction caused by poor contact of ACC power supply circuits	<Ref. to BC(diag)-30, DTC B1104 ACC POWER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1105	Key Interlock Circuit Abnormal	GND-output short of key interlock circuit	<Ref. to BC(diag)-32, DTC B1105 KEY INTERLOCK CIRCUIT ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1106	Shift Lock Circuit Failure	Voltage malfunction caused by poor contact of shift lock circuits	<Ref. to BC(diag)-34, DTC B1106 SHIFT LOCK CIRCUIT FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1401	M Collation NG	Malfunction related immobilizer	<Ref. to BC(diag)-36, DTC B1401 M COLLATION NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1402	Immobilizer Key Collation NG	Malfunction related immobilizer	<Ref. to BC(diag)-36, DTC B1402 IMMOBILIZER KEY COLLATION NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1405	SCU Collation NG	Malfunction related immobilizer	<Ref. to BC(diag)-36, DTC B1405 SCU COLLATION NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1406	SCU_EEPROM_NG	Malfunction of security control module	<Ref. to BC(diag)-36, DTC B1406 SCU_EEPROM_NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1407	M Communication Abnormal	Communication failure between body integrated unit and combination meter	<Ref. to BC(diag)-36, DTC B1407 M COMMUNICATION ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1408	Meter EEPROM Abnormal	Combination meter malfunction	<Ref. to BC(diag)-36, DTC B1408 METER EEPROM ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1409	SCU Communication Abnormal	Communication failure between body integrated unit and security control module	<Ref. to BC(diag)-36, DTC B1409 SCU COMMUNICATION ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1410	Transponder Communication Abnormal	Communication failure between key and body integrated unit	<Ref. to BC(diag)-36, DTC B1410 TRANSPONDER COMMUNICATION ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

BODY CONTROL SYSTEM (DIAGNOSTICS)

DTC	Item	Content of diagnosis	Note
B1411	Immobilizer Antenna Abnormal	Faulty antenna	<Ref. to BC(diag)-36, DTC B1411 IMMOBILIZER ANTENNA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1500	Keyless UART Com. Malfunction	Open or short circuit in keyless UART circuit	<Ref. to BC(diag)-37, DTC B1500 KEYLESS UART COM. MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>