


## 2. Relay and Fuse

### A: LOCATION

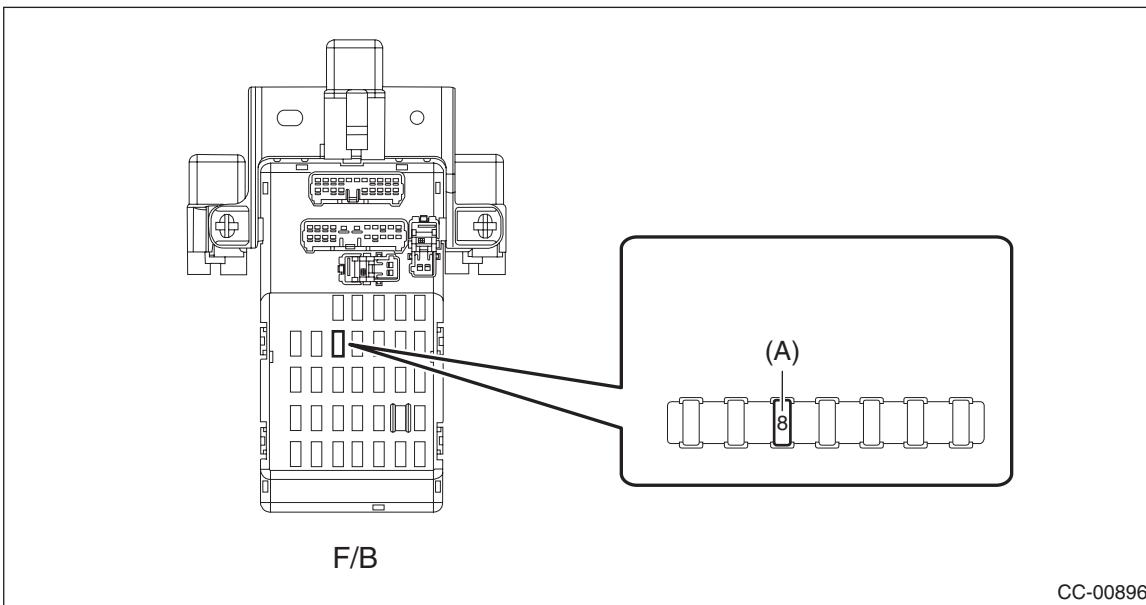

Relay & fuse box	Fuse 20A (stop light and brake switch)	(A)
------------------	--	-----

**NOTE:**

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

### B: INSPECTION

#### 1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

**NOTE:**

If the fuse is blown again, check the system wiring harness.