


Instrument Panel Lower Cover

EXTERIOR/INTERIOR TRIM

13. Instrument Panel Lower Cover

A: REMOVAL

- 1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 2) Remove the clips, and remove the cover - instrument panel side LH.

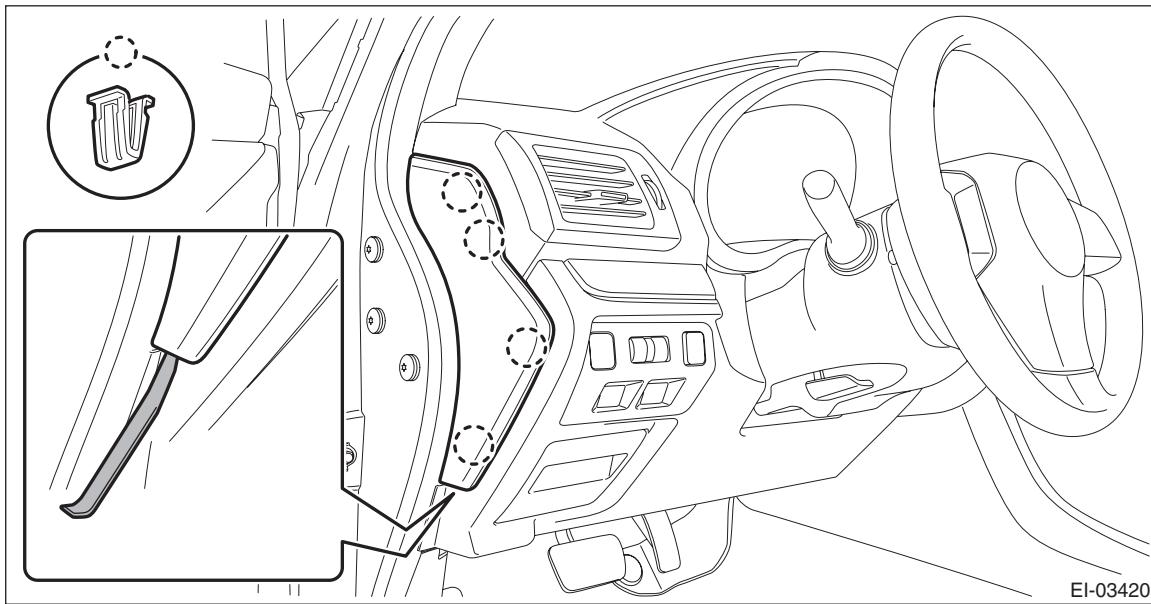


NOTE:

Using a plastic remover, open the cover - instrument panel side LH.

- 3) Remove the cover assembly - instrument panel LWR driver INN and OUT.

(1) Remove the screws and release the clips and claws.

(2) Disconnect the harness connectors, and remove the cover assembly - instrument panel LWR driver INN and OUT.

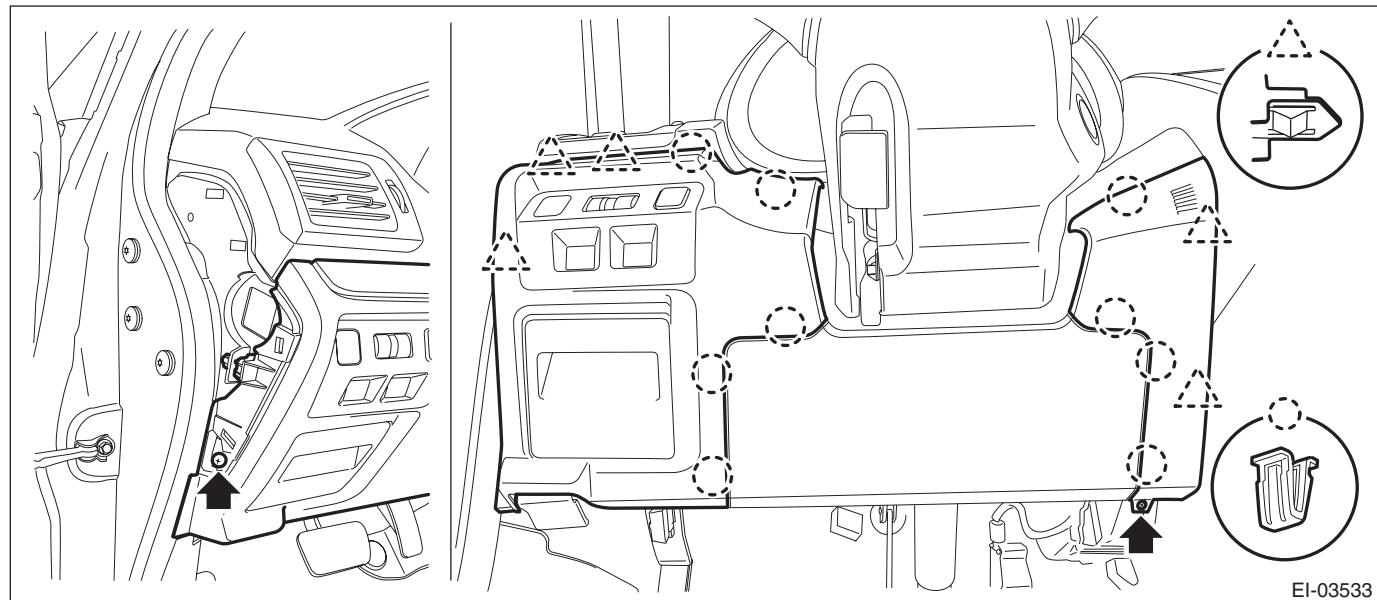

B: INSTALLATION

Install each part in the reverse order of removal.