


## 2. Front Under Cover

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolts and clips, and remove the under cover - front.

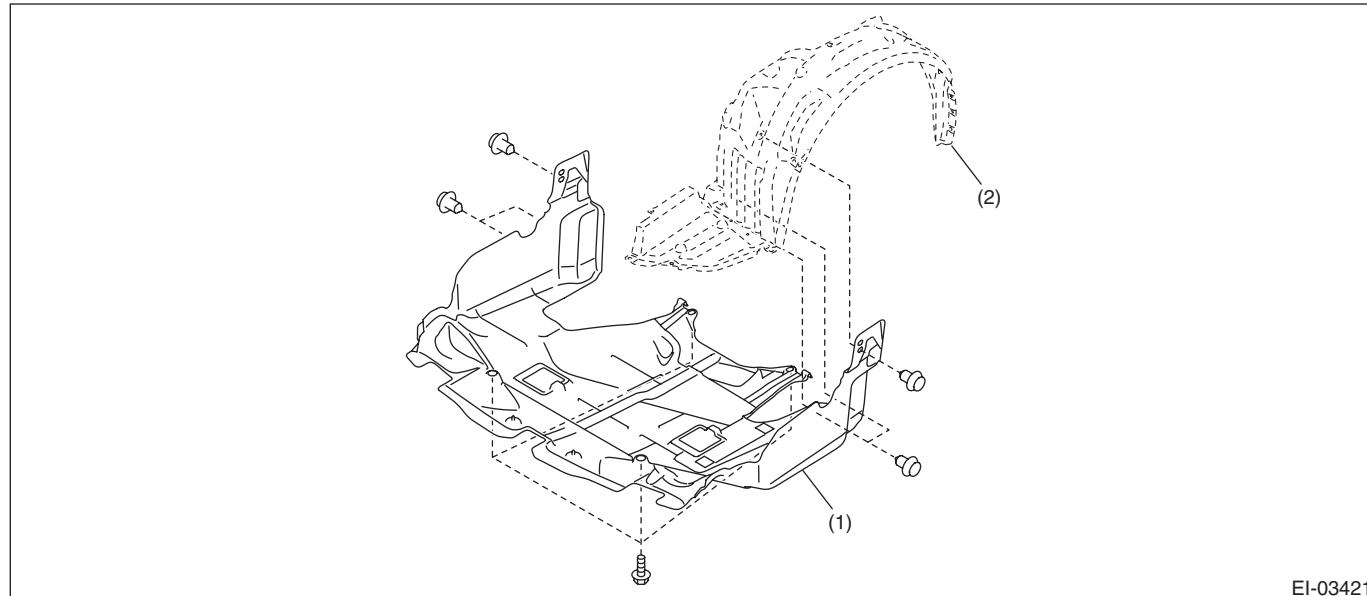

(1) Under cover - front


(2) Mud guard - front

EI-03421

### B: INSTALLATION

#### CAUTION:

Install the under cover so that the under cover front end (b) comes inside of the bumper face - front (a).

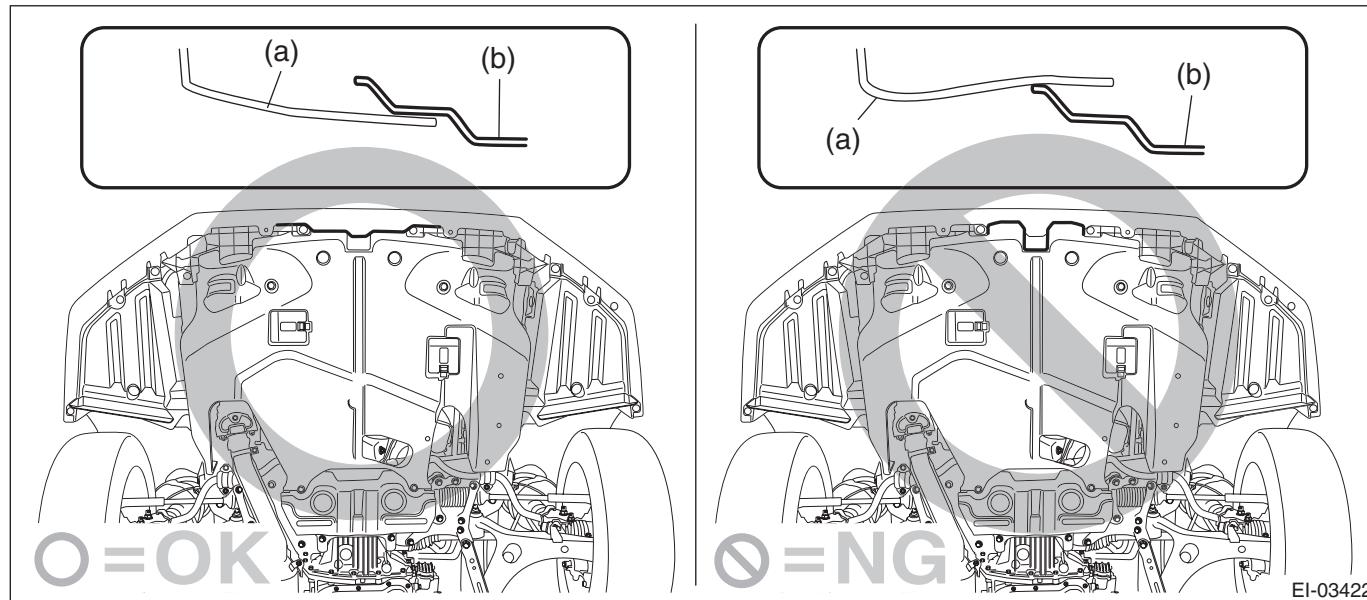

Install each part in the reverse order of removal.

#### **Tightening torque:**

**17.5 N·m (1.78 kgf·m, 12.9 ft-lb)**