


24. Assist Grip

A: REMOVAL

Remove the assist rail.

- 1) Remove the cap (a).
- 2) Pull the assist rail toward you (to the vehicle center) and remove the metal clip from the bracket - assist rail.

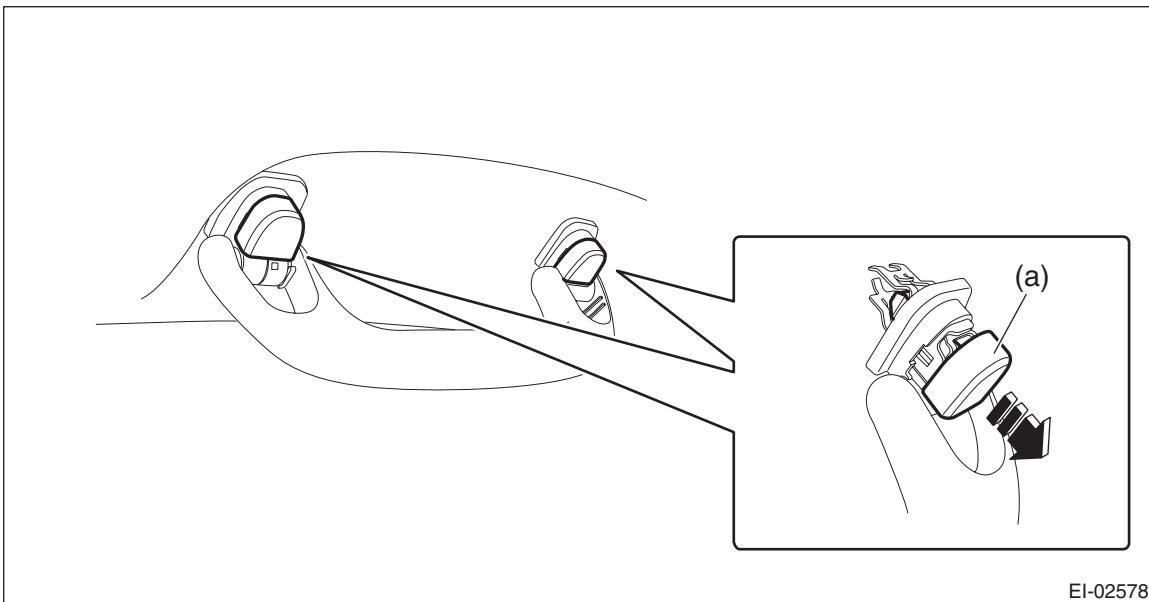

B: INSTALLATION

Install each part in the reverse order of removal.