


9. Outer Mirror Assembly

A: REMOVAL

- 1) Remove the trim panel - front door. <Ref. to EI-58, FRONT DOOR, REMOVAL, Door Trim.>
- 2) Remove the sealing cover - front door.
- 3) Remove the outer mirror assembly.
 - (1) Disconnect the connector.
 - (2) Remove the bolts to remove outer mirror assembly.

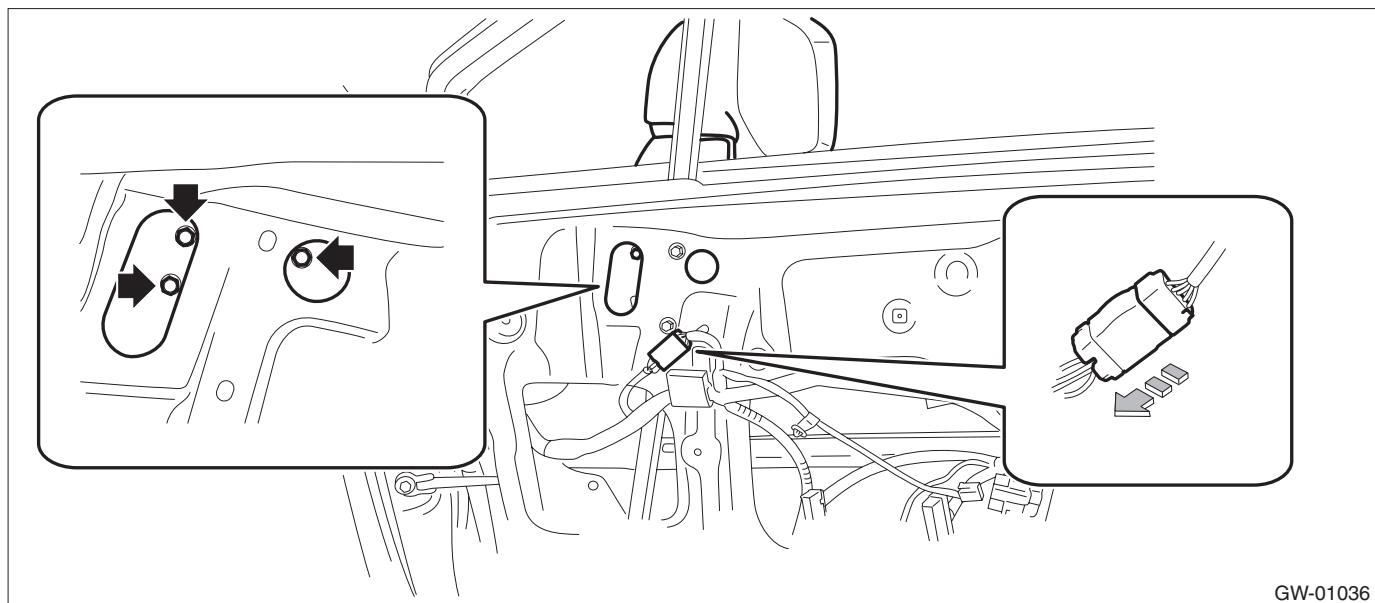

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:


Outer mirror assembly: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

C: INSPECTION

- 1) Disconnect the outer mirror connector.
- 2) Apply battery voltage between the outer mirror connector terminals and check the mirror operation.

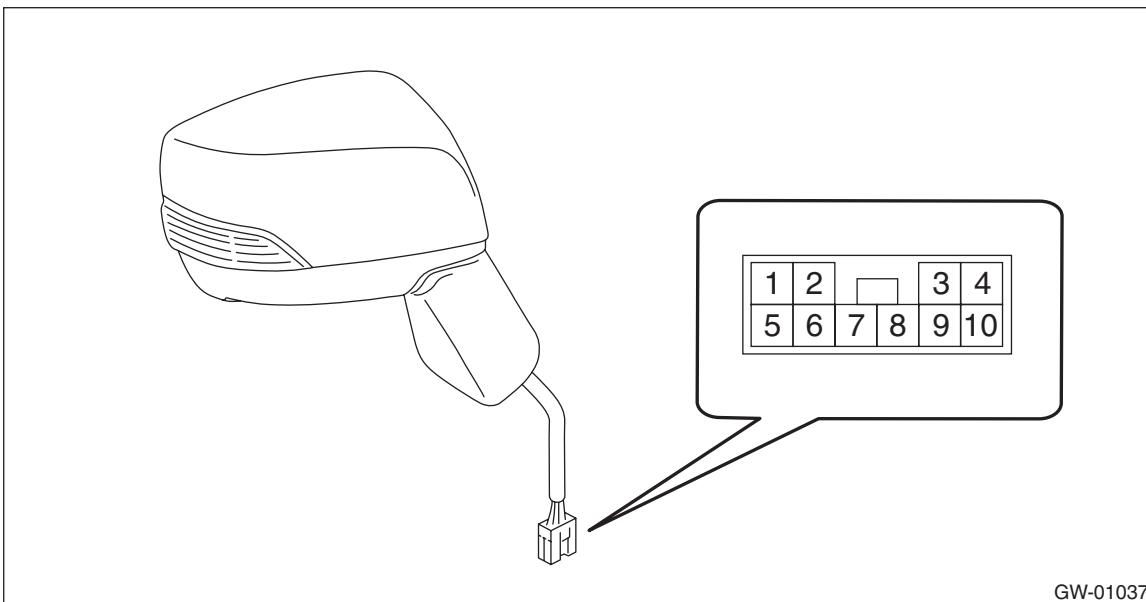

Terminal No.	Inspection conditions	Switch position
—	—	OFF
3 (+) — 8 (-)	Apply battery voltage between terminals.	UP
8 (+) — 3 (-)	Apply battery voltage between terminals.	DOWN
7 (+) — 3 (-)	Apply battery voltage between terminals.	LEFT
3 (+) — 7 (-)	Apply battery voltage between terminals.	RIGHT

- 3) If it does not operate normally, replace the outer mirror assembly.