


10. Blower Motor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the blower - motor.
 - (1) Disconnect the connector.
 - (2) Remove the screws and detach the blower - motor.

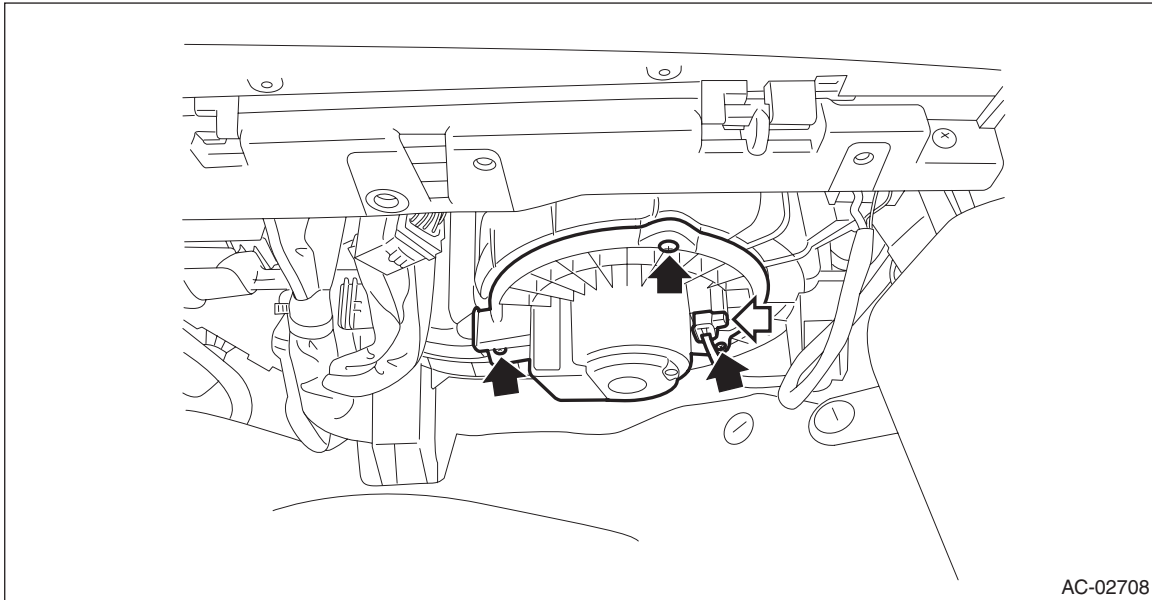

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

UNIT INSPECTION

- 1) Check the motor operation when battery voltage is applied between the terminals of motor.

Terminal No.	Inspection conditions	Specification	Connection diagram
2 (+) — 1 (—)	Connect battery to the terminals	Speed	AC-02797

- 2) If it does not operate normally, replace the blower - motor.