


Heater Vent Duct

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

31.Heater Vent Duct

A: REMOVAL

- 1) Remove the instrument panel assembly. <Ref. to EI-70, REMOVAL, Instrument Panel Assembly.>
- 2) Remove the screws and remove the duct - center vent (A) and the duct - side ventilation (B) on LH and RH sides.

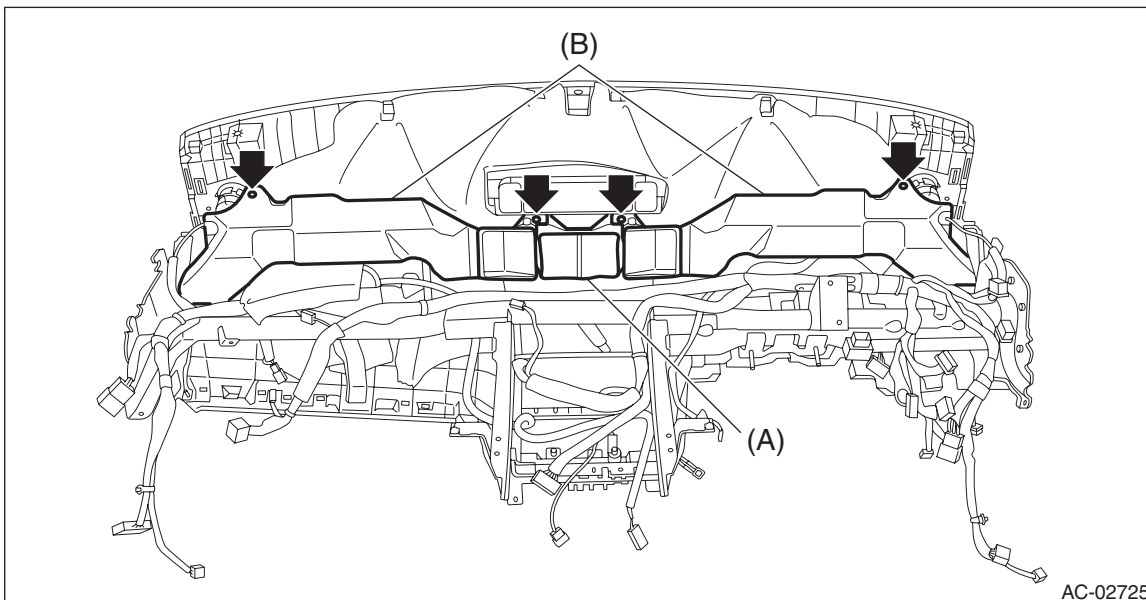

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of "Instrument Panel Assembly". <Ref. to EI-87, INSTALLATION, Instrument Panel Assembly.>