

11. User Customizing

A: OPERATION

For operation procedures, refer to the “PC application help for Subaru Select Monitor”.

B: LIST

- Combination meter

Items to be displayed	Initial setting value	Customize setting	Note
External air temperature compensation value	±0°C	-5°C — +5°C	The temperature is compensated only for every 1°C (The change of 1°C corresponds to 1.8°F).
Mean fuel consumption compensation value	±0%	-10% — +10%	—