

## 36. Ignition Switch Illumination

### A: REMOVAL


NOTE:

The ignition switch illumination is integrated into the immobilizer antenna assembly.


1) Disconnect the ground cable from battery.

2) Remove the cover assembly - column.

(1) Remove the screws by turning the steering wheel to right and left.

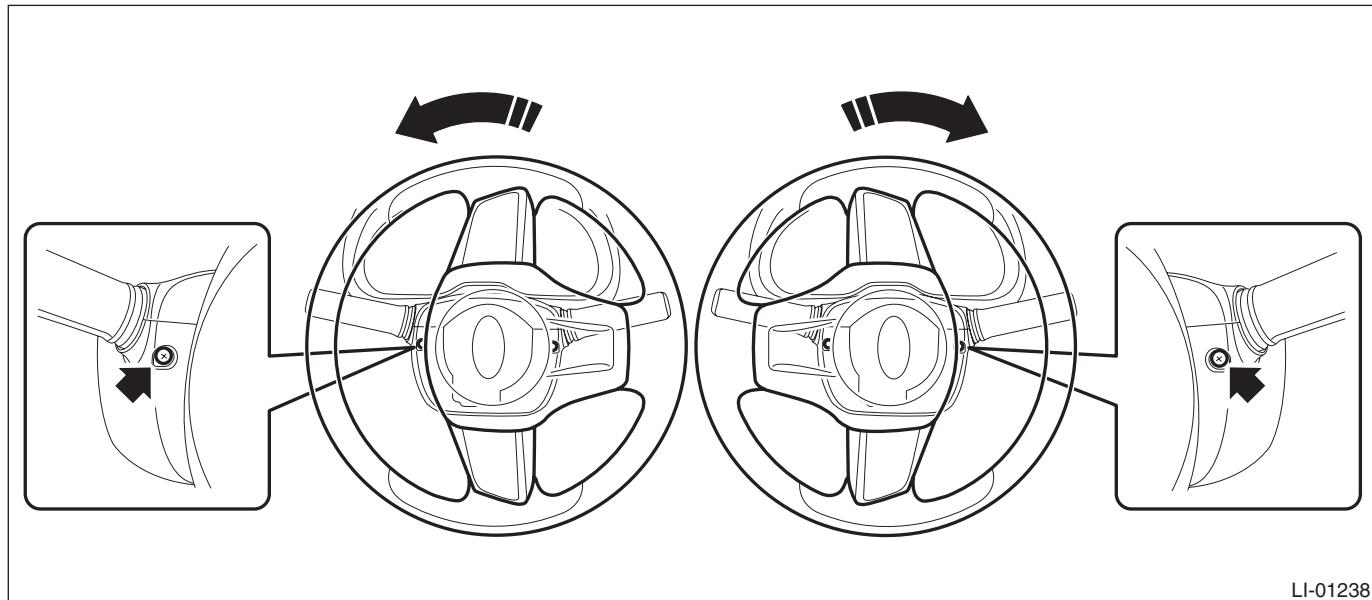


(2) Release the claw, and remove the cover assembly - column UPR and the cover assembly - column LWR.

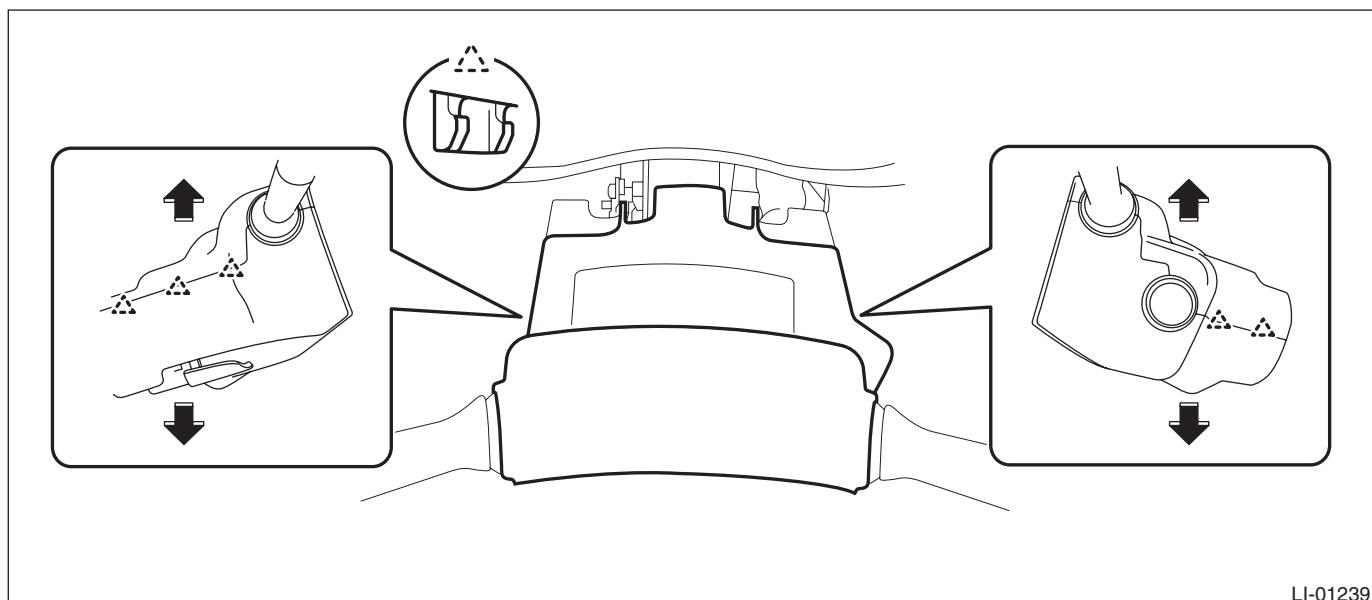

3) Disconnect the connector and remove the ignition switch illumination.

### CAUTION:

**Do not apply excessive force to remove the ignition switch illumination lock. Otherwise they may be broken because those parts are the products made of a plastic.**

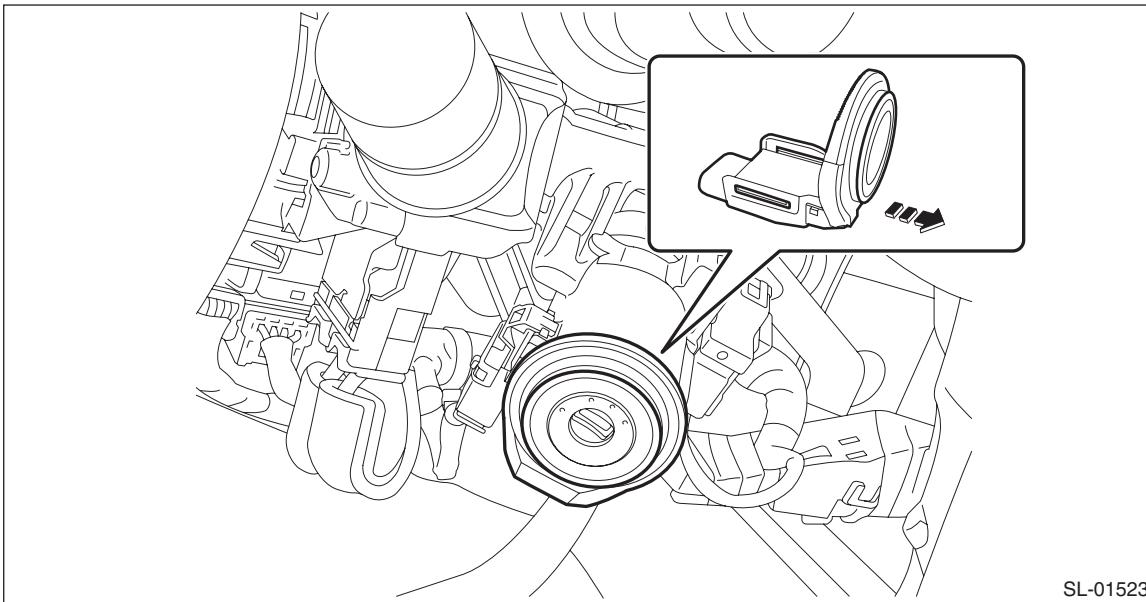

## B: INSTALLATION

Install each part in the reverse order of removal.

## C: INSPECTION

### On- the vehicle inspection

*Preparation tool:*

*Circuit tester*

Step	Check	Yes	No
1 <b>CHECK THE IGNITION SWITCH ILLUMINATION.</b> Make sure the ignition switch illumination illuminates when driver's side door is open.	Does the ignition switch illumination illuminate?	Ignition switch illumination is normal. Go to step 2.	
2 <b>CHECK THE IGNITION SWITCH ILLUMINATION.</b> Make sure the ignition switch illumination blinks when the ignition switch is turned to ON.	Does the ignition switch illumination blink?	Check the function setting of body integrated unit. <Ref. to BC(diag)-2, Basic Diagnostic Procedure.>	Check the ignition switch illumination circuit. <Ref. to SL-25, CHECK IGNITION SWITCH ILLUMINATION, INSPECTION, Keyless Entry System.>